TABLE OF CONTENTS

Introduction 1
Radio Interferece Parameters 1
Package Contents 2
Monitor/*Receiver* 2
Camera/*Transmitter* 3

To Start

Charging/Powering On 4
Locking the Screen 4
Set to Another Language 4
Pairing Camera and Monitor 5
Main Menu 6

Touch Navigation

Volume/Display 7
Lullabys 7
Night Light 7
Record 8
Play 9
Quad and Channel View 10
VOX (Voice Activation) 10

Settings

Monitor Settings 11-14
Camera Settings 15
Individual Channel & Convenience Icons 16
Webcam Use • Data/File Transfers 17
Audio/Video Out 18
Troubleshooting 18
Factory Default Settings 19
Battery Replacement 20
Product Safety 20
Proper Disposal 21
Limited Warranty 21
Addendum: Focusing Camera Lens 21
About Mobi® / Contact Mobi® 22

INTRODUCTION

Congratulations on the purchase of this MobiCam® DXR Touch Monitoring System, which incorporates the latest advanced technology. To fully maximize and benefit from this product's avanced features we highly recommend you review these instructions. This 2.4 GHz Digital monitor enables you to transmit picture and sound signals cordlessly, which is ideal for many situations suchs as monitoring a baby, young children or the elderly, or used as office or warehouse monitoring system.

IMPORTANT: ***Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.***

RADIO INTERFERENCE PARAMETERS

FCC Statement

15.19: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.
15.21: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment has been tested and complies with Federal Communications Commission radiation exposure limits as set forth for uncontrolled environments. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This Camera must not be co-located or operating in conjunction with any other antenna or Camera. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or Camera. This device has been tested for compliance with FCC RF Exposure (SAR) limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers via USB slots. This device and its antenna must not be co-located or operated in conjunction with any other antenna or Camera.

IC Statement

Operation of this device is subject to the following two conditions: 1. This device may not cause interference, and 2. This device must accept any interference, including interference that may cause undesired operation of the device.

PACKAGE CONTENTS

- 1 Monitor/Receiver
- 2 AC/DC Adaptors 5V 800mAh
- 1 Attachable Strap Mount
- 1 Wall Anchor Mount with Screw
- 1 AV-Out Cable
- 1 Camera/Transmitter
- 1 Li-Ion Rechargeable Battery (for monitor only)
- 1 Door/Drawer Hook Attachment
- 1 USB to Mini USB Data Cord
- 1 User Manual

MONITOR

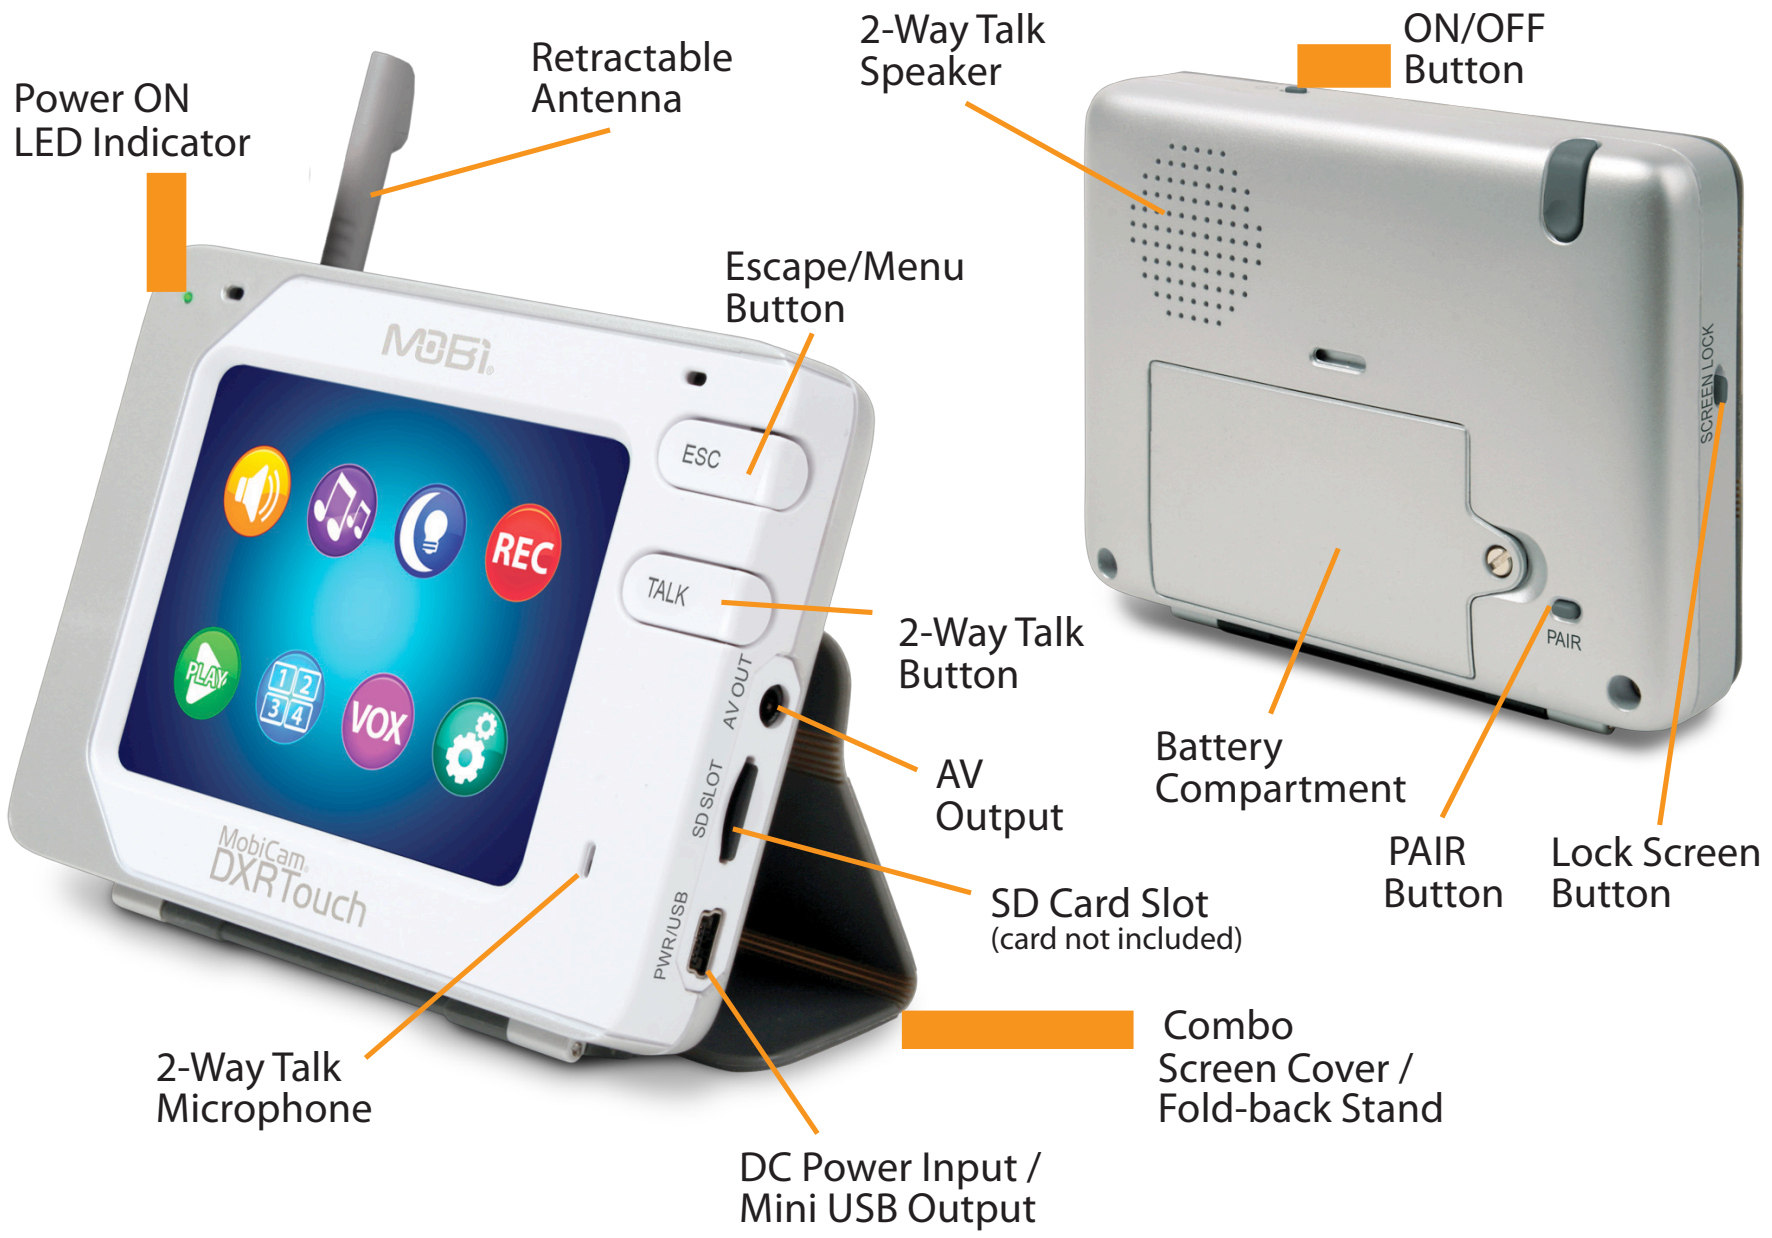
Power ON
LED Indicator
Retractable
Antenna
2-Way Talk
Speaker
ON/OFF
Button
Escape/Menu
Button
2-Way Talk
Button
AV
Output
Battery
Compartment
PAIR
Button
Lock Screen
Button
SD Card Slot
(card not included)
Combo
Screen Cover /
Fold-back Stand
2-Way Talk
Microphone
DC Power Input /
Mini USB Output
ESC
TALK
REC
PLAY
VOX
AV OUT
SD SLOT
PWR/USB
PAIR
SCREEN LOCK
MobiCam DXRTouch

Monitor / Receiver Unit

features:

- 3.5" QVGA resolution TFT touch panel screen
- VGA resolution (640*480) up to 25 frames per second
- up to 250-300 meter range
- 2-way communication
- MENU/ESCAPE button
- PAIR Button
- TALK Button
- Lock Screen Button for disabling touch screen
- SD Card Slot up to 32 Gb (not included)
- Mini USB Output port (for connection to a PC and charging)
- A/V Output port
- DC Input (AC/DC adaptor included)
- Two-Color LED: solid green for power on; flashing red for charging
- Quad-View split screen (up to 4 camera capability)
- Main Menu with color icon display
- Rechargeable Li-ion Battery 3.7V 1200 mAh (included for monitor only)

CAMERA

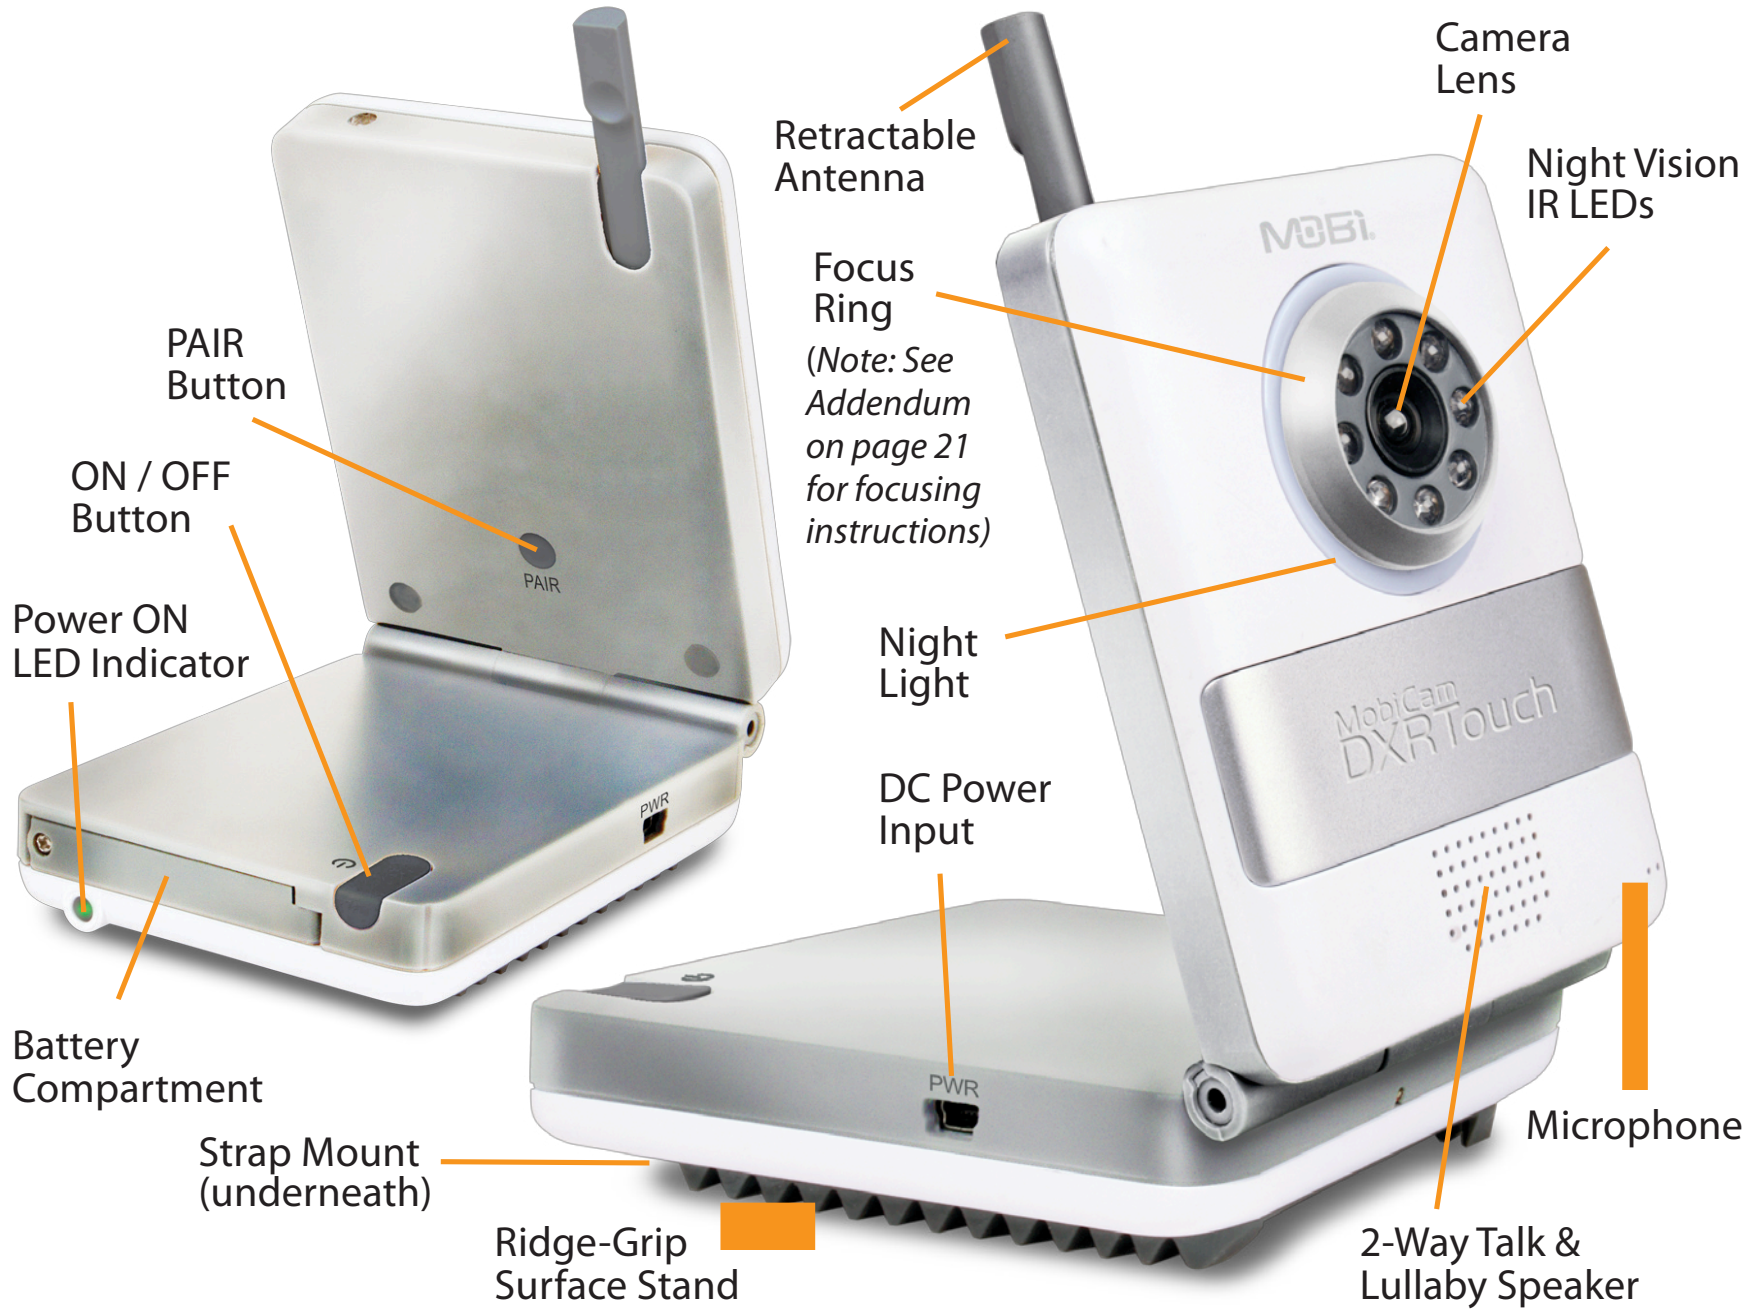
Retractable
Antenna
Camera
Lens
Night Vision
IR LEDs
Focus
Ring
(Note: See Addendum on page 21 for focusing instructions)
PAIR
Button
ON / OFF
Button
Power ON
LED Indicator
Night
Light
DC Power
Input
Battery
Compartment
Strap Mount
(underneath)
Ridge-Grip
Surface Stand
Microphone
2-Way Talk &
Lullaby Speaker
PAIR
PWR
MobiCam DXRTouch

Camera / Transmitter Unit

features:

- PAIR Button
- LED for Power ON / Pairing (flashes)
- Microphone & Speaker
- DC Input (AC/DC adaptor included)
- Night Vision
- Temperature Sensor and Alarm
- VOX (Hi/Mid/Lo/Off) controlled from receiver
- Adjustable Volume from receiver
- Adjustable TX Power (High-Low) from receiver
- 4 Pre-Recorded Lullaby choices
- Night Light
- Rechargeable Battery 3.7V 1500 mAh (not included - sold separately)
- 2.4GHz Digital FHSS, 100% secure with full privacy and interference free

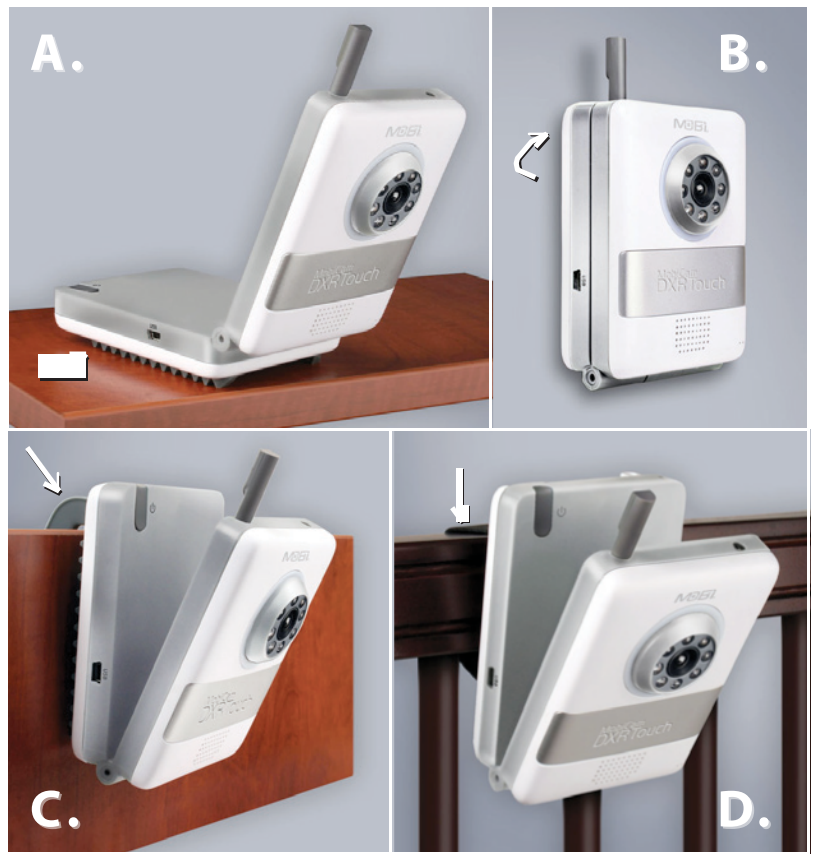

Positioning / Mounting Options

A. Horizontal to Slightly Angled Surfaces - Built-in Ridge-Grip Feet… **B.** Wall Mount Screw with Drywall Anchor (included)… **C.** Door or Drawer Hook Mount / Stand (included)… **D.** Horizontal Rails / Drawer Handles - Attachable Strap Mount (included)

WARNING: To prevent strangulation never place a power cord within reach of a child.

TO START

A. Plug one of the AC/DC adapters (they are interchangeable) into the monitor and allow it to **charge the Monitor Battery** for at least 5-1/2 hours.

B. Plug the other AC/DC adapter into the camera. **Turn the Camera On** by holding the **ON/OFF Button** down for several seconds. The green "Power On" Indicator lights when powered up.

C. **Turn the Monitor On** by holding its **ON/OFF Button** down for several seconds. Its "Power On" Indicator will light up (green on battery power, red when charging) and the Mobi logo will appear on the screen.

D. **Press ESC Button** to go to the **Main Menu**.

NOTE: While viewing the Main Menu, if no buttons are pressed, or the screen is not touched after 30 seconds, the monitor will automatically exit the Main Menu mode.

Main Menu

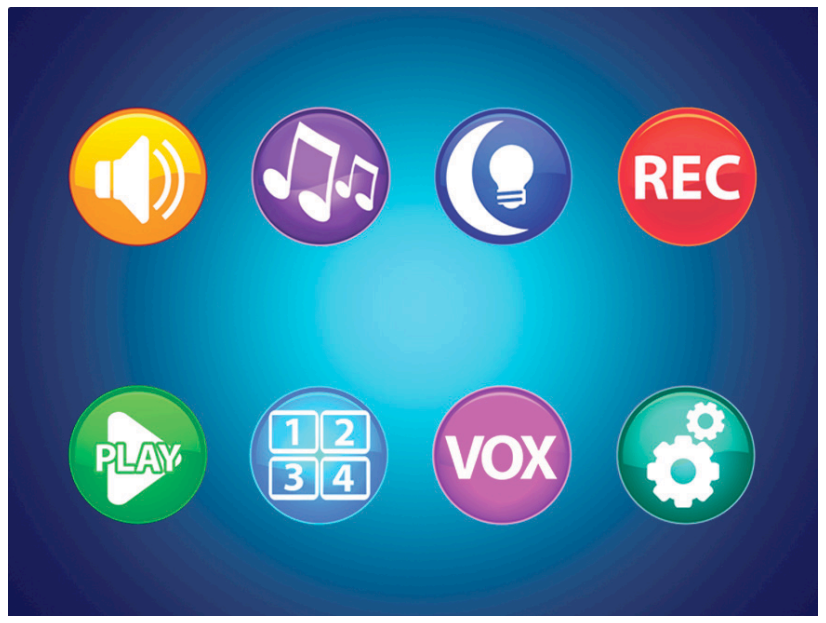

E. **Press ESC Button** once again to go to the **Camera View**. Along the top and bottom of the screen, small "Per Camera" Icons (explained on page 16) will appear over the view from the camera, which should be on and paired with the monitor.

IMPORTANT: ***Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.***

Camera View

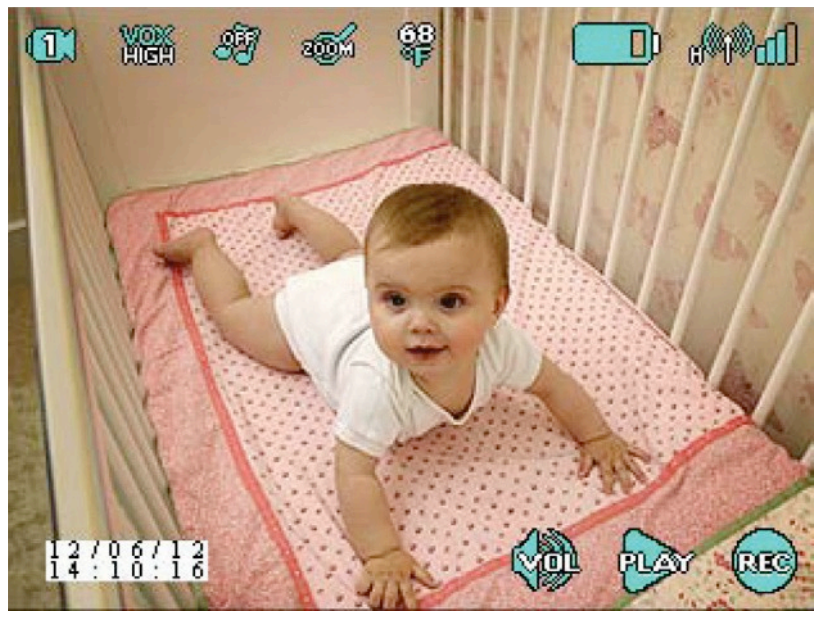

LOCKING THE SCREEN: If you slide the **Lock Screen Button** a LOCK icon will appear and the touch-screen function will be disabled. Sliding the Lock Screen Button again will revert it back to normal touch-screen function.

TO SET TO ANOTHER LANGUAGE: The monitor is set to ***English*** by default. The MobiCam® DXR Touch can also display in ***French, German, Portuguese, Spanish,*** *or* ***Italian***. To change the language follow these steps: press the **ESC Button**
touch **Setting** icon
touch **System Setting**
touch slider to **See More List**
select **Language** from the list
select a new **Language**
press the **ESC Button**

PAIRING: The monitor and camera are paired (wirelessly linked) by the manufacturer at the factory. If you ever need to relink the camera, or you want to pair Additional Cameras (sold separately) you will need to pair each following the steps below:

NOTE: Before pairing be sure the camera and monitor are both turned on and both are within 10 feet of each other.

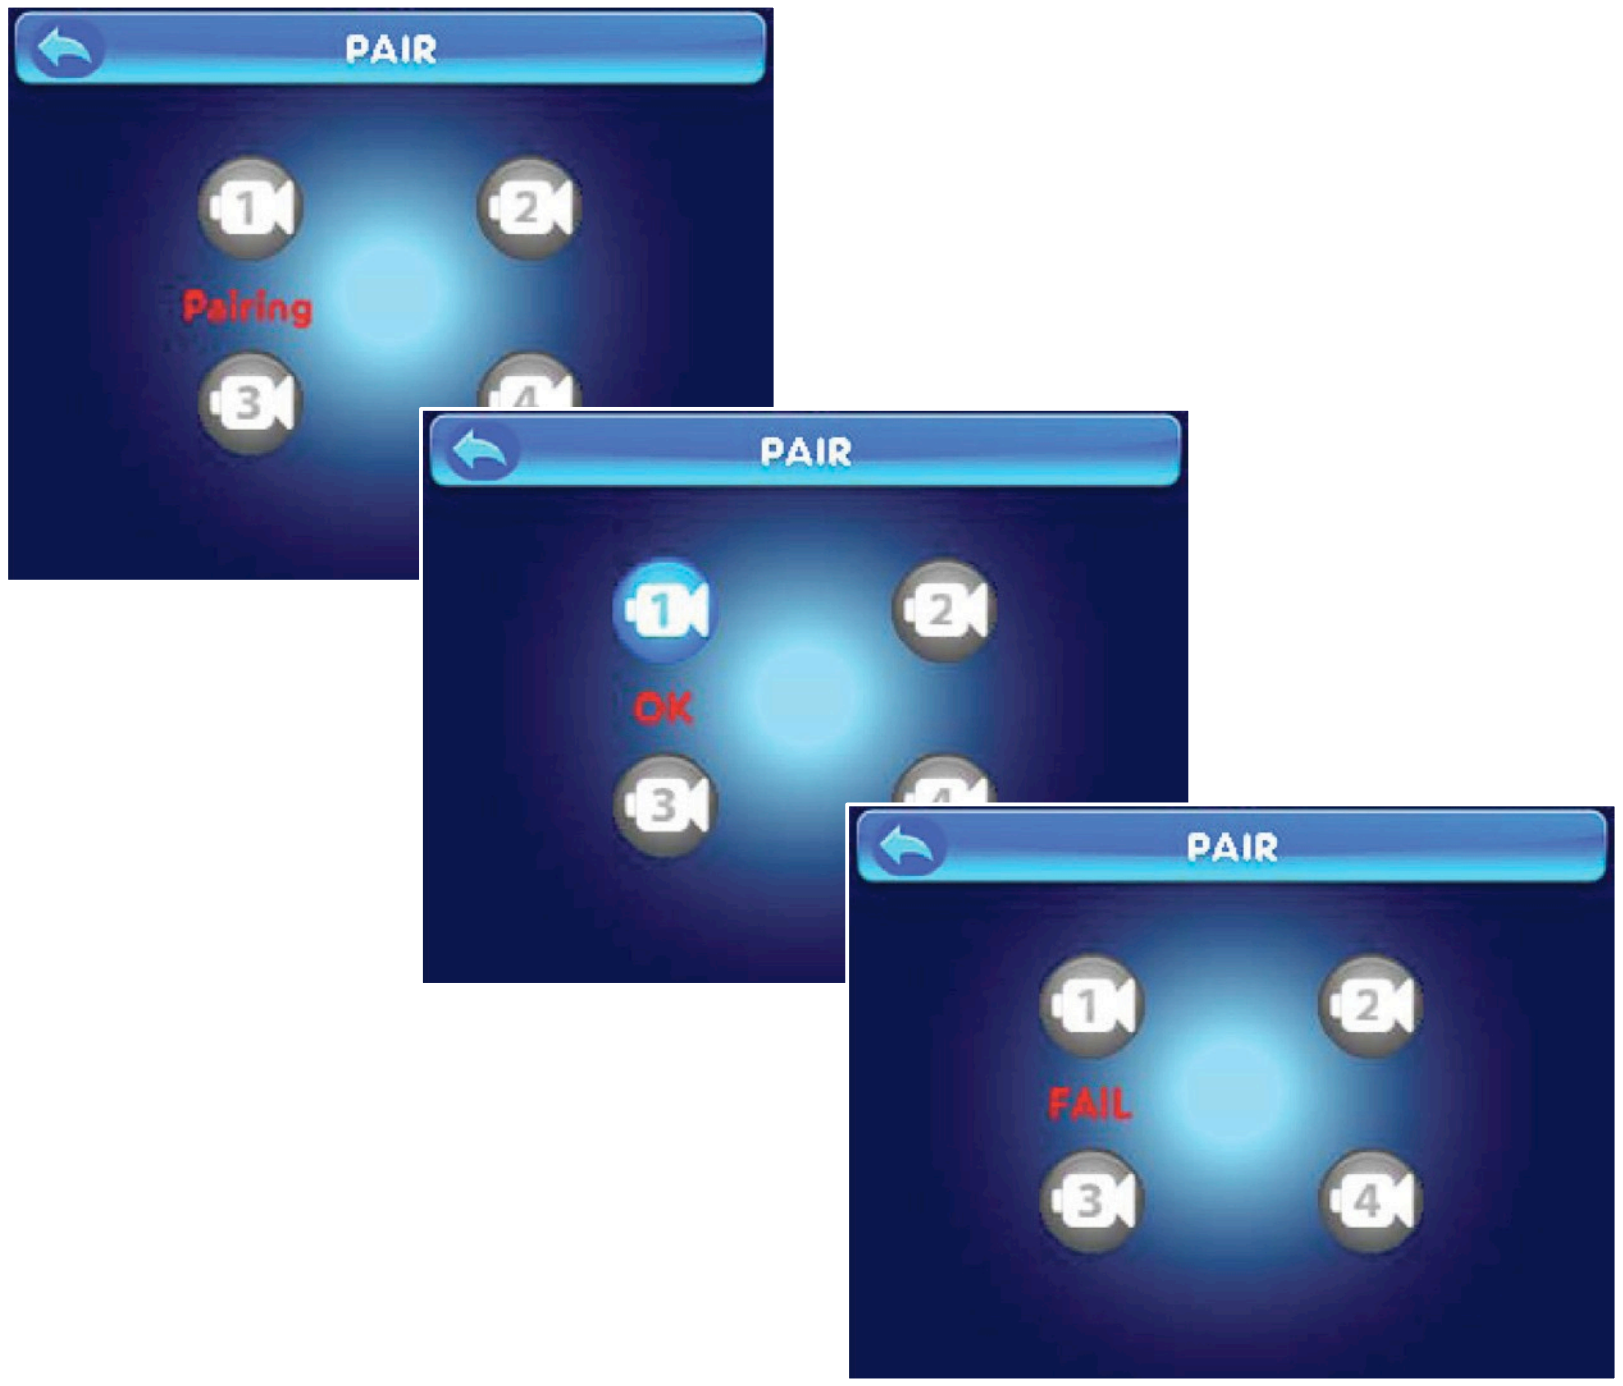

1. **Power On** the Monitor and Camera

2. Press and hold the **Pair Button** on the back of the **Monitor** until the "Pair" screen is displayed, then release the button.

3. Press and release the **Pair Button** on the **Monitor** and select a camera number (1-4) to be paired. The word "**Pairing**" appears below the icon of the selected camera as it waits to be paired.

4. You have 10 seconds to press and hold the **Pair Button** on the back of the **Camera** to complete Pairing, otherwise restart from step 2 above.

5. The word "**OK**" or "**Failed**" will be displayed on screen. If pairing Failed start again being sure the camera is on and not too far away.

6. When Pairing shows as OK, press the **ESC Button** or the **Return** icon ↩ to go back. To pair additional cameras repeat the steps above.

MAIN MENU *... touch the **ESC Button** to open the Main Menu on screen*

IMPORTANT: ***Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.***

Touch the appropriate icon to access all Settings and Options.

VOLUME / DISPLAY
adjust
- Sound Volume
- Screen Contrast
- Screen Brightness

LULLABYS
select
- Camera Number
- Lullaby Choice
- Lullaby Volume

NIGHT LIGHT
select
- Camera Number
- Night Light On
- Night Light Off

RECORD
select
- Take Photo
- Record Video
- Format SD Card
- SD Information
- Time/Date Stamp

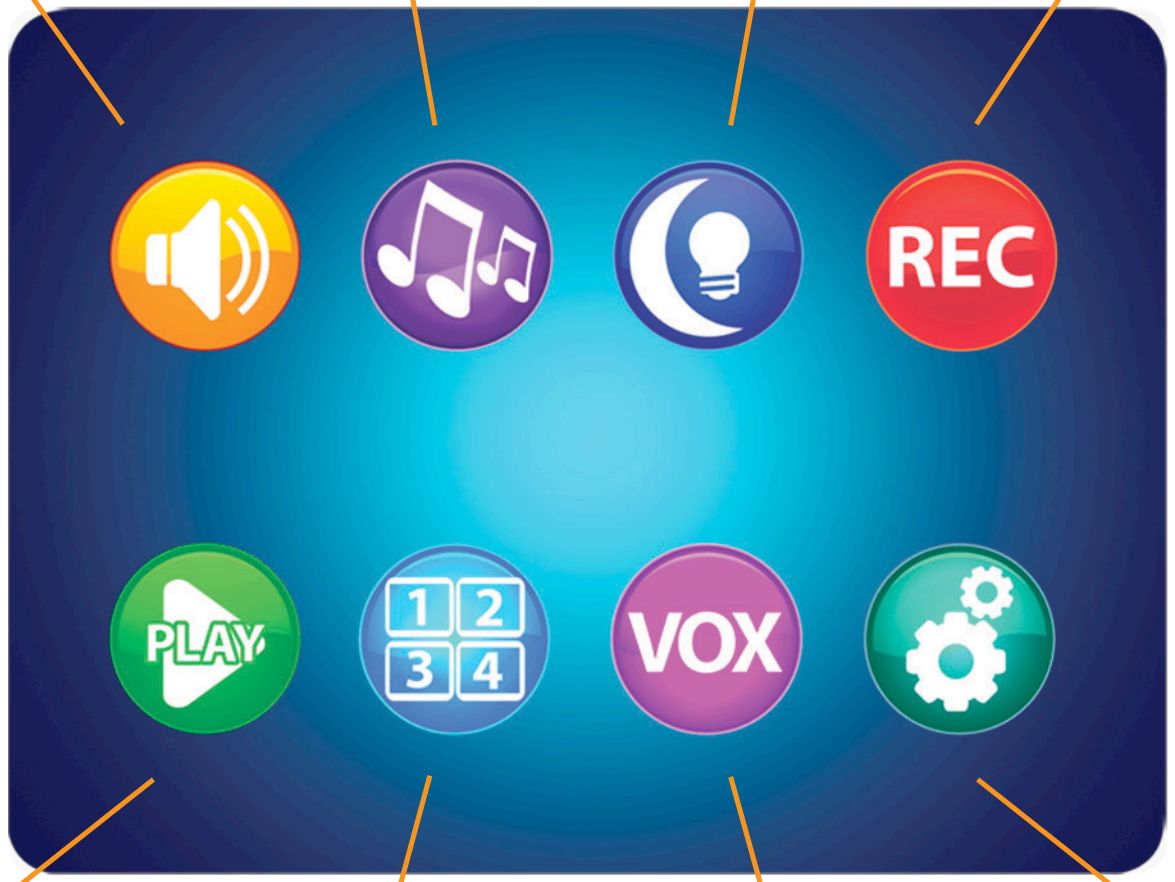

PLAY
select / play
- Recorded Video
- Recorded Photo
- Delete Files

QUAD / CHANNEL
select
- Quad View
- Specific CAMs
- Switch CAMs

VOX (Voice Activation)
select
- Camera Number
- VOX On/Off
- Sound Sensitivity
- Auto Record On/Off

SETTINGS
*for the **Camera***
- Temperature Alarm
- TX Power/Volume

SETTINGS
*for the **Monitor***
- Date/Time
- Time Alarm
- Auto Switch Time
- AV Out Format
- Recording Schedule
- Zoom/Pan/Tilt
- Screen Timeout
- Touch Calibration
- USB Output
- SD Card Update
- Languages
- Reset to Default
- About / Version

TOUCH NAVIGATION *... touch the **ESC Button** to start at Main Menu*

*touch a **Menu Icon** ... to open a **Function Screen** ... to check or change a **Function***

VOLUME / DISPLAY

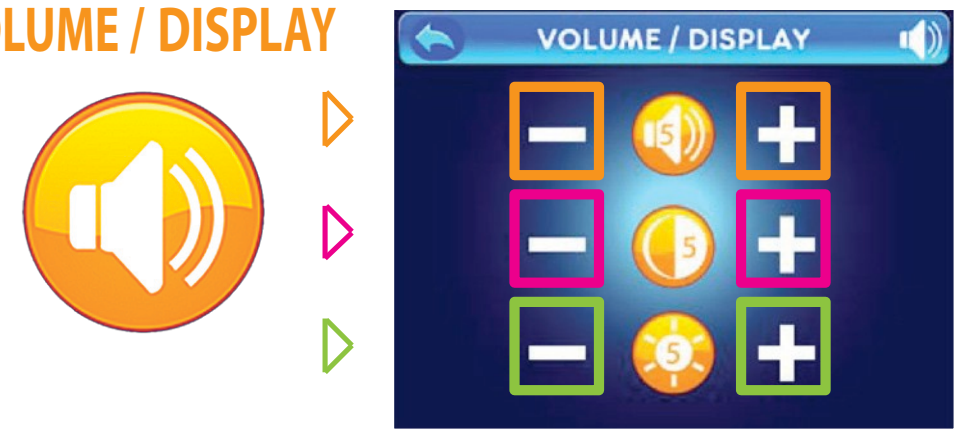

touch − or + icons to adjust...
- ***Monitor Volume***
- ***Screen Contrast***
- ***Screen Brightness***

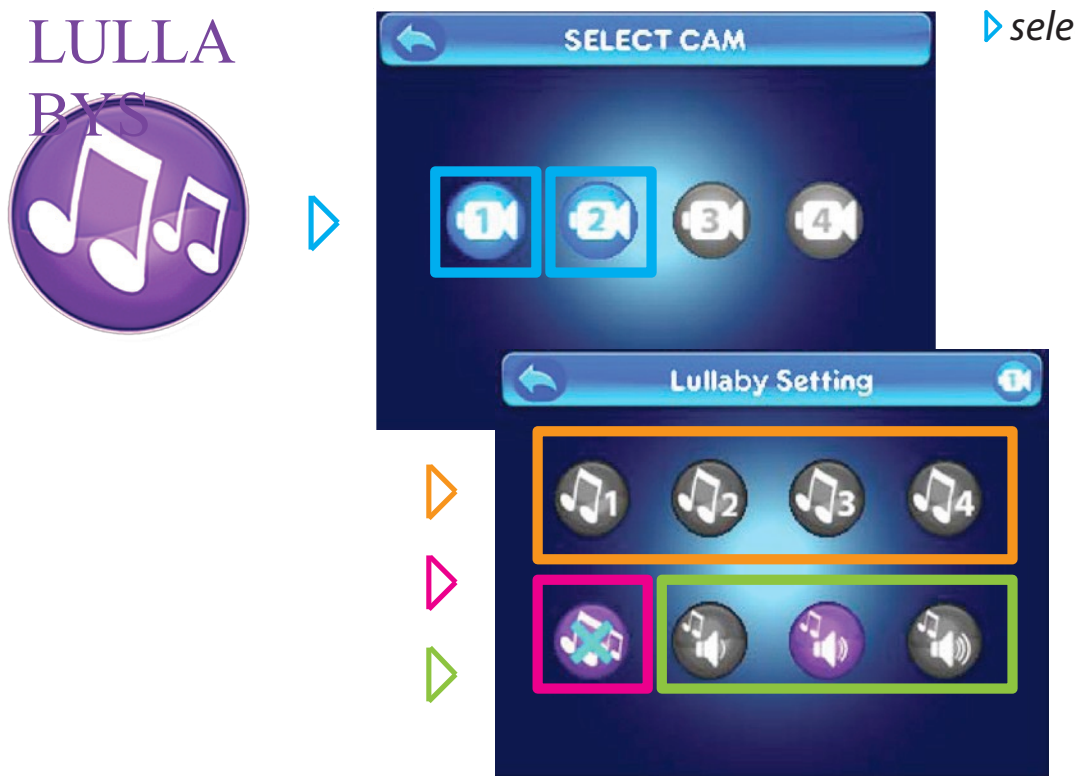

- *select a **Camera**...*
- *select one of four **Lullabys***
- *deactivate all **Lullabys**...*
- *adjust **Lullaby Volume***

NIGHT LIGHT

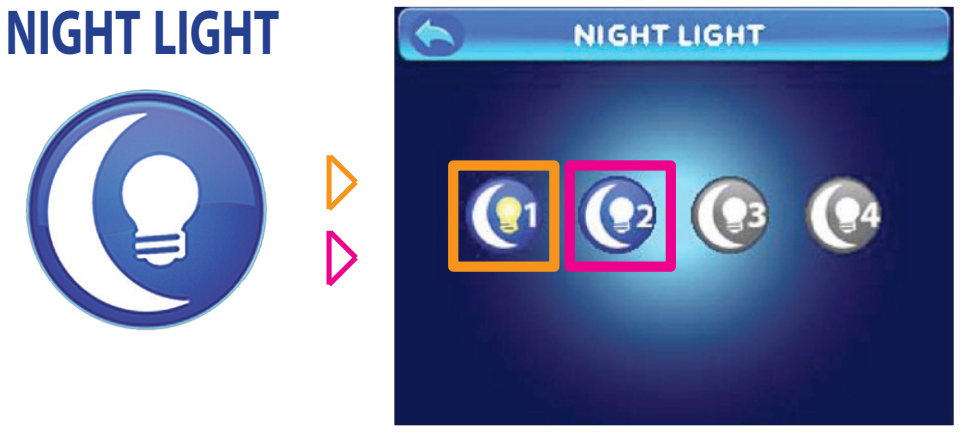

*select a **Night Light** icon for the camera you wish to control...*
- *shown with the **Night Light ON***
- *shown with the **Night Light OFF***

(the light bulb image in the icon changes to yellow when ON and back again when OFF)

*HINT: To move back one screen touch **Return** icon ↩ or go to camera view by pressing the **ESC Button**.*

RECORD

NOTE: All recording functions require an SD memory card (max 32 Gb).

NOTE: While recording no other functions are available until recording is stopped.

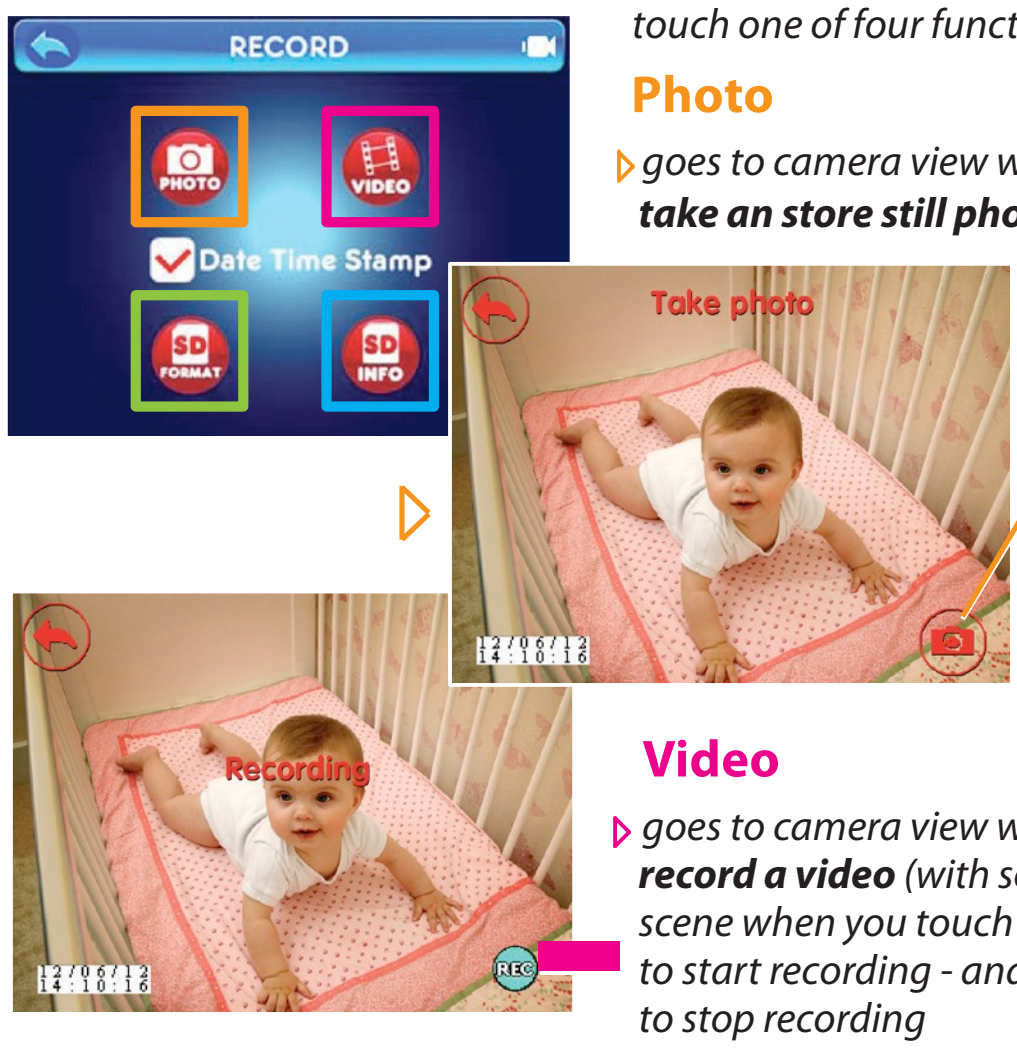
RECORD
PHOTO
VIDEO
Date Time Stamp
SD FORMAT
SD INFO
Take photo
Recording
REC

touch one of four functions...

Photo

- *goes to camera view where you can **take an store still photo** when you*

*touch the **Still Camera** icon*

Video

- *goes to camera view where you can **record a video** (with sound) of the scene when you touch the **REC** icon to start recording - and press it again to stop recording*

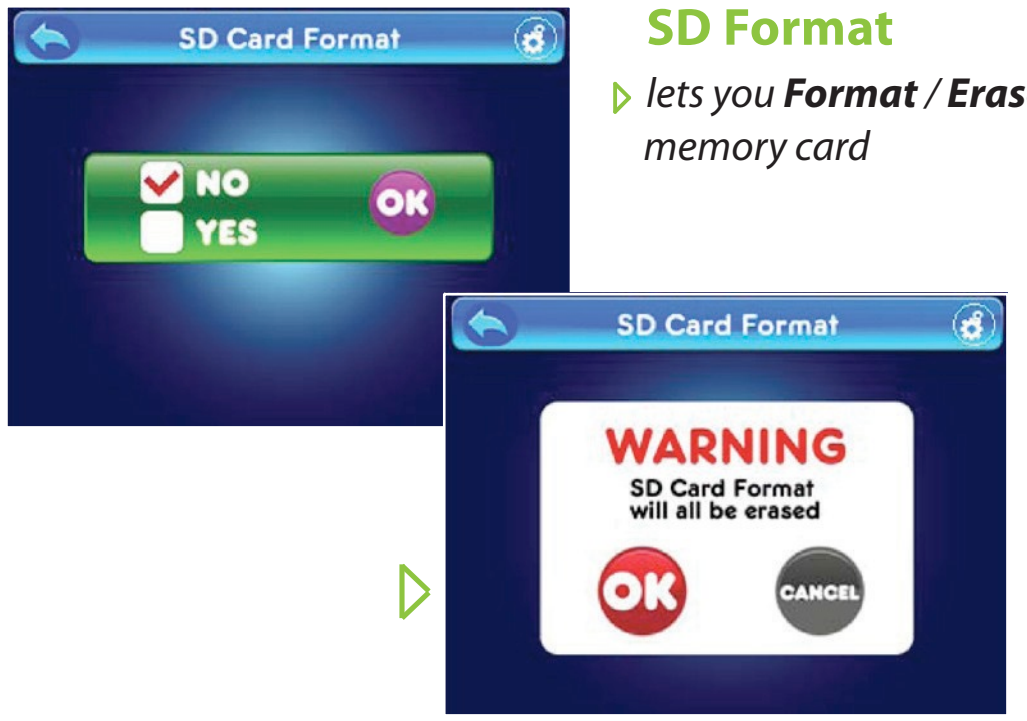
SD Card Format
NO
YES
OK
SD Card Format
CANCEL

WARNING
SD Card Format will all be erased

SD Format

- *lets you **Format** / **Erase** an SD memory card*
- *select **OK** or **Cancel***

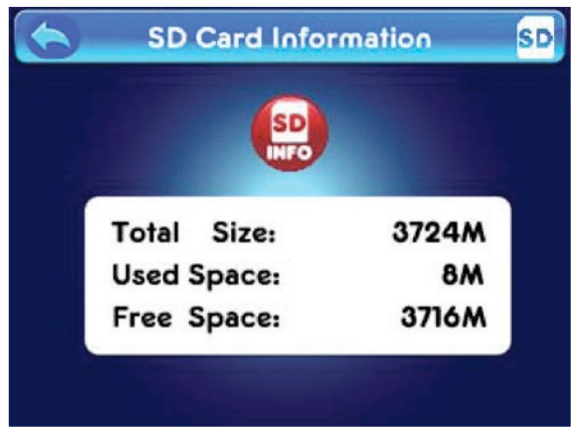
SD Card Information
SD INFO

Total Size: 3724M
Used Space: 8M
Free Space: 3716M

SD Info

*displays **Total Size, Used Space,** and **Free Space** on an SD card in the SD card slot*

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

PLAY

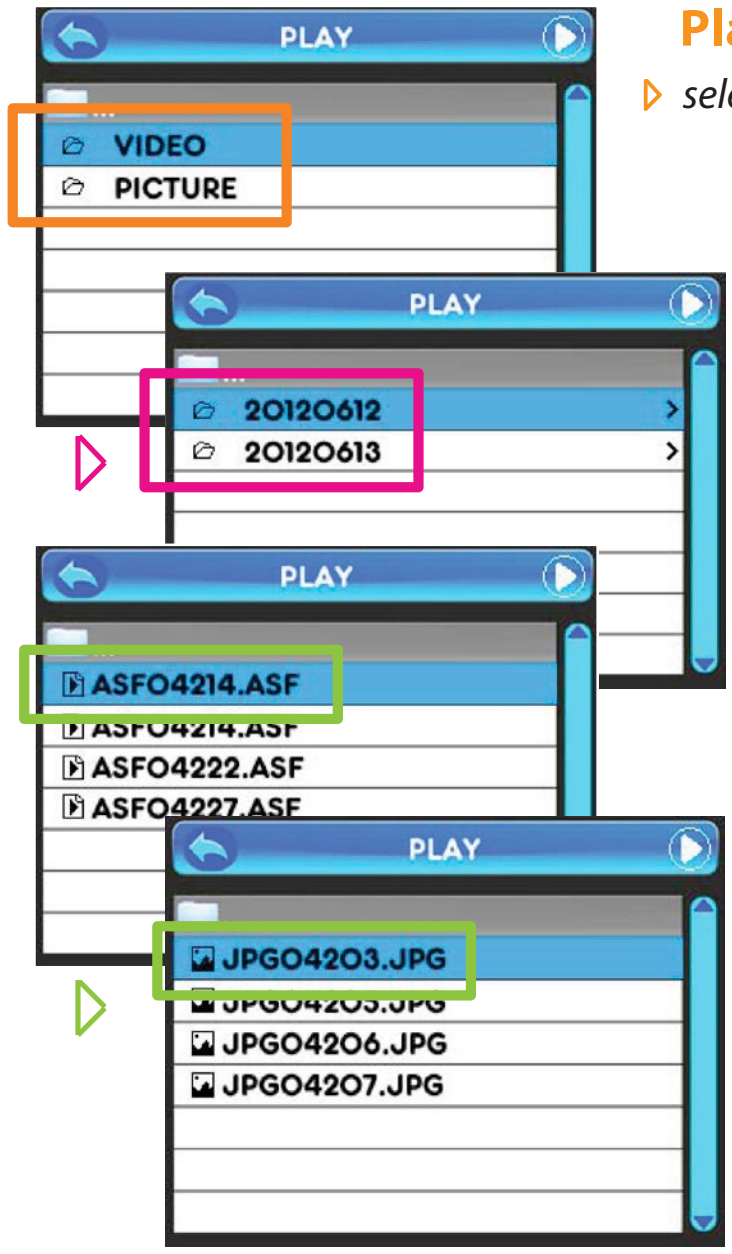
PLAY
VIDEO
PICTURE
PLAY
20120612
20120613
PLAY
ASF04214.ASF
ASF04214.ASF
ASF04222.ASF
ASF04227.ASF
PLAY
JPG04203.JPG
JPG04206.JPG
JPG04207.JPG

Playback of Recordings

- *select **Video** or **Picture** folder option*
- *select a folder for the **Date of the Recording** (shows as year/ month/day with no separations)*
- *select a **Video** or **Picture** file to **Play / View** (videos are .asf format and pictures are .jpg format)*

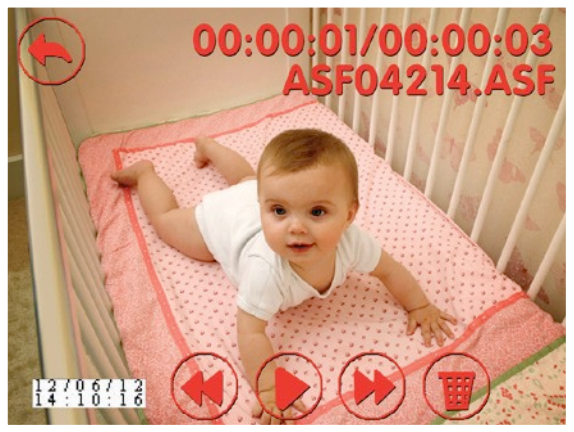
00:00:01/00:00:03
ASF04214.ASF

- *as you view a **Recorded Video** file the screen will also show...*

  ***Return** icon (upper left) - used to exit the playback at any time*

  ***Elapsed Time / Total Play Time /** and **Date-Time Stamp** (upper right)*

  ***Video Play** controls (bottom center)*

  ***Delete** icon (trash can bottom right)*

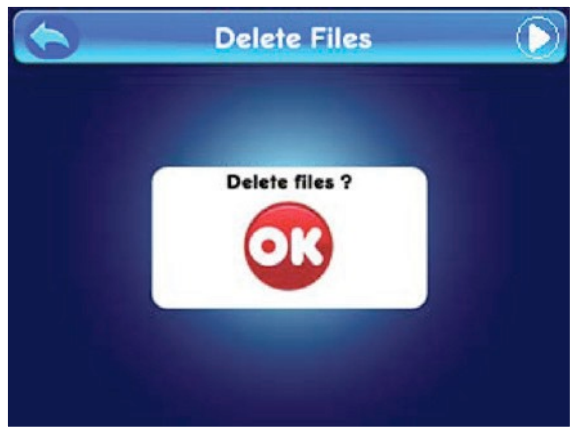
Delete Files
Delete files ?
OK

- *when the **Delete** icon is touched you then see this screen to **confirm file deletion** with an **OK***

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

TOUCH NAVIGATION *... touch the **ESC Button** to start at Main Menu*

*touch a **Menu Icon** ... to open a **Function Screen** ... to check or change a **Function***

QUAD / CHANNEL

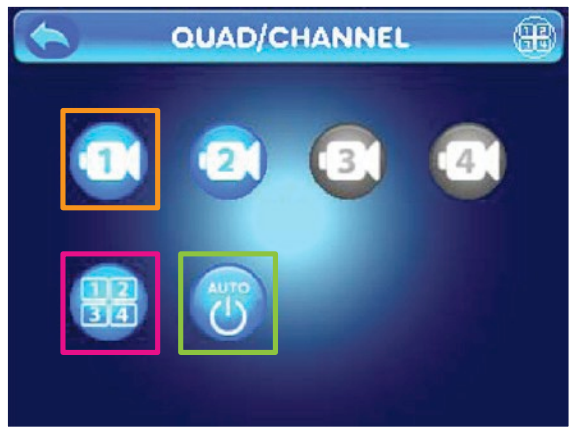
A
B
C
QUAD/CHANNEL
1
2
3
4
AUTO

choose from these options...

Single Camera View

A *from Quad/Channel screen, select an active **Camera** icon (shown in color if actively paired) to be your only video channel in this mode. The screen will then show the view from that camera.*

*NOTE: All cameras must be **Paired** to the monitor for viewing access. (Refer to Pairing on page 5.)*

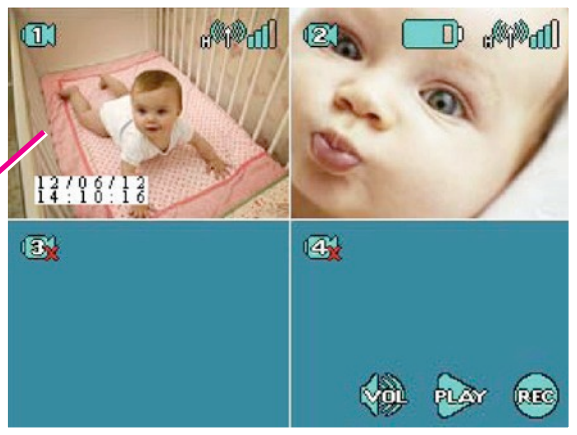
VOL
PLAY
REC

Quad View

B *from Quad/Channel screen, select the **Quad** icon which then shows you all currently paired camera views (up to 4) on screen simutaniously.*

- *Note: Only paired cameras will show on the quad with any unused camera views left blank.*

*NOTE: In **Quad** mode, touching any active camera image changes to that full screen single camera view. Also sound only from the last camera in full screen mode can be monitored.*

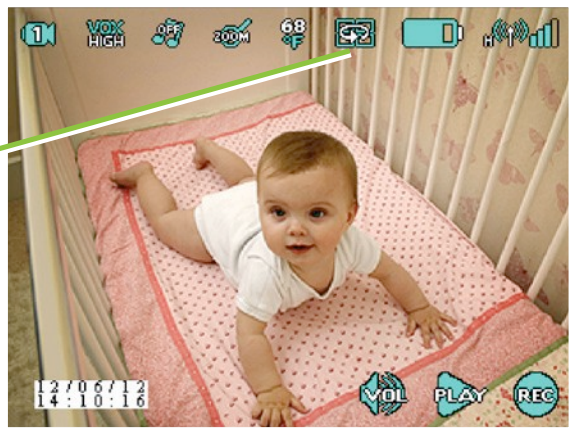
VOX HIGH
VOL
PLAY
REC

Auto Scan View

C *from Quad/Channel screen, select the **Auto** icon to begin alternating full screen views from each paired camera (up to 4) automatically changing from one camera view to the next*

*NOTE: In **Auto Scan** mode (indicated by this symbol) you can select which cameras to include and the scan time between each camera. (Refer to Auto Switch Time on page 11.)*

VOX
Sound Activated Monitoring

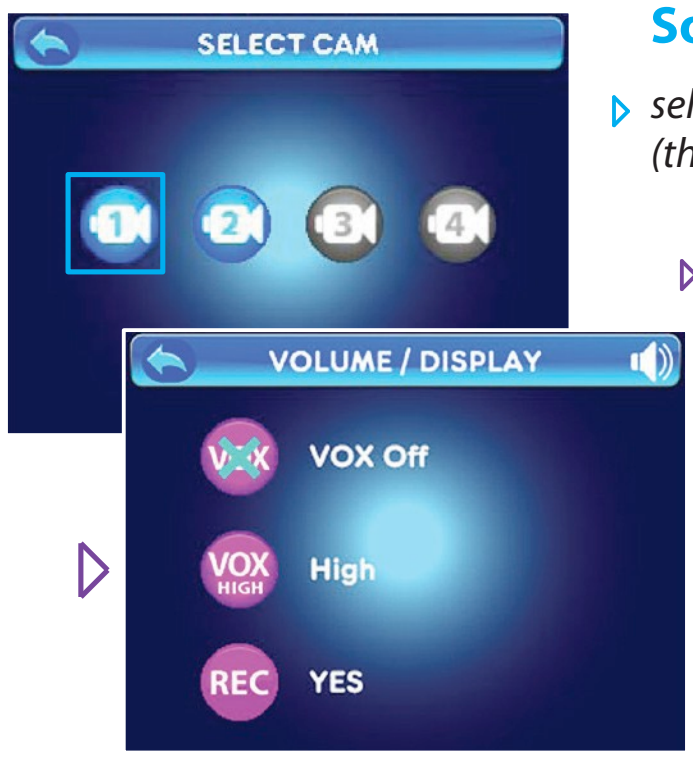
SELECT CAM
1
2
3
4
VOLUME / DISPLAY
VOX Off
High
YES

Sound Activated Mode (VOX)

- *select a paired **Camera** icon (the ones in color)*
- *then select from 3 options...*

***VOX** (set to On or Off)*

***VOX Sound Sensitivity** (set to High, Med or Low)*

***Sound-Activated Recording** (set to Yes or No - must have an SD card in the Monitor to record)*

*NOTE: **VOX** keeps monitor (picture and sound) off until the camera detects a sound, which automatically turns the monitor back on. This helps prevent false alarms and allows parents more rest.*

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

TOUCH NAVIGATION *... touch the **ESC Button** to start at Main Menu*

*touch a **Menu Icon** ... to open a **Function Screen** ... to check or change a **Function***

SETTINGS

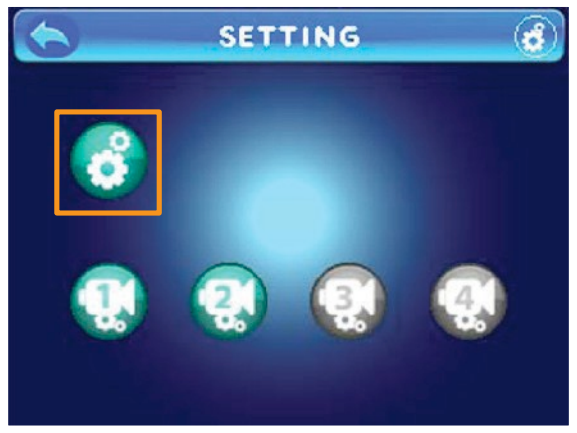
SETTING
1
2
3
4

Monitor Setting

- *on the Setting Screen, simply touch the **System Setting** icon (two gears) to access monitor functions...*

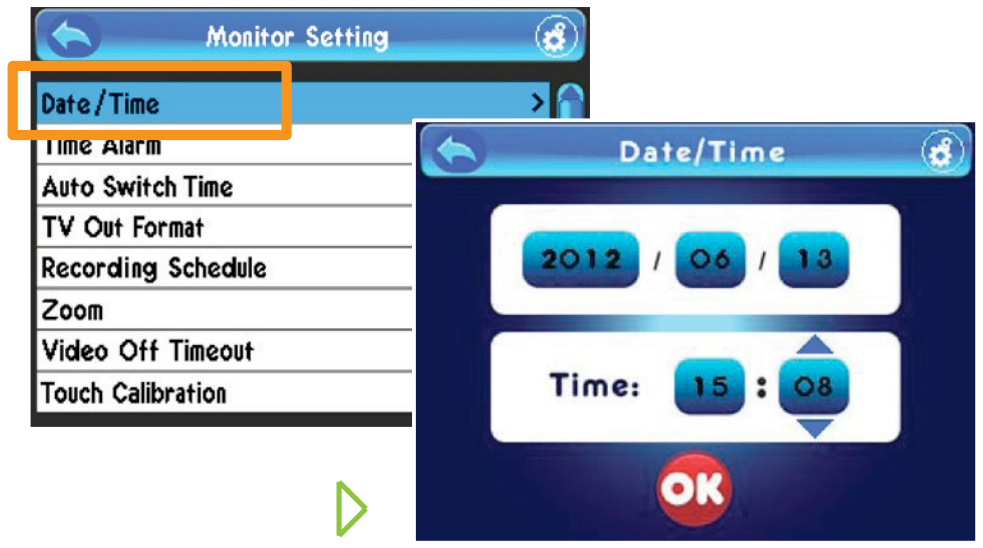
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
Date/Time
2012 / 06 / 13
Time: 15 : 08
OK

From the *Monitor Setting* list...

- *select **Date/Time***
  - *touch **any value**, then touch the **arrows** to adjust **value up** or **down***
  - *press **OK** to **save changes***

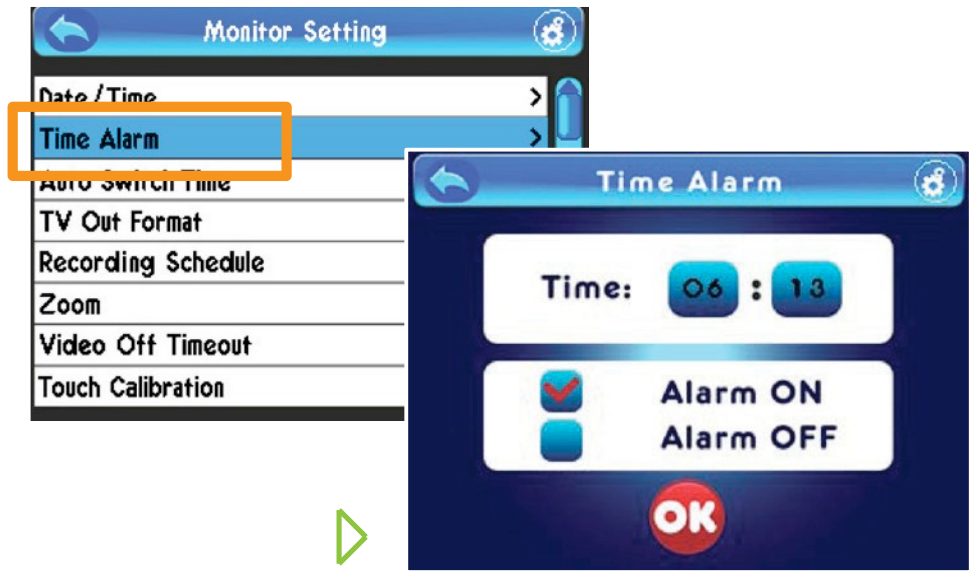
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
Time Alarm
Time: 06 : 13
Alarm ON
Alarm OFF
OK

From the *Monitor Setting* list...

- *touch **Time Alarm***
  - *touch **any value**, then touch the **arrows** to adjust **value up** or **down***
  - *touch **Alarm On** or **Alarm Off***
  - *touch **OK to set***

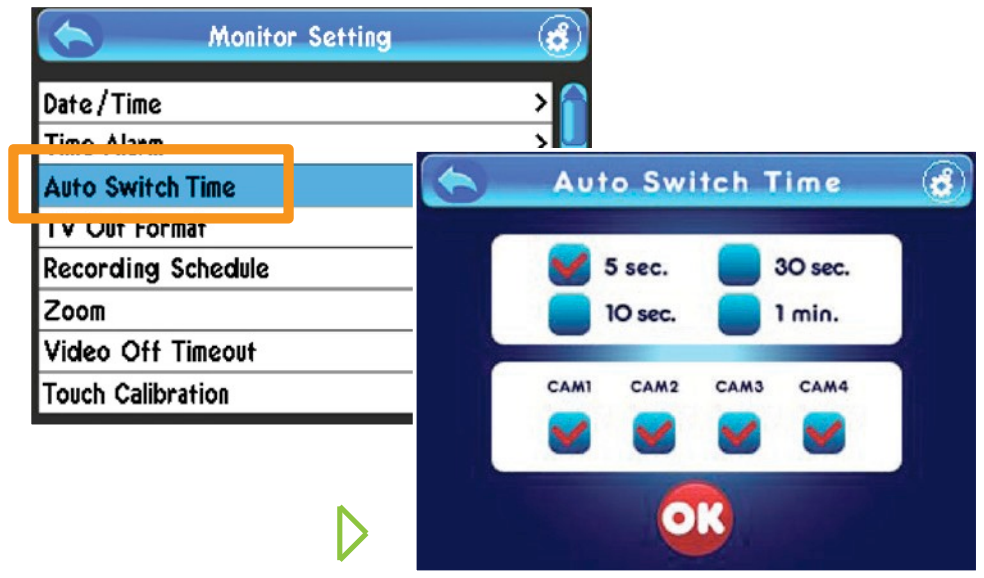
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
Auto Switch Time
5 sec.
30 sec.
10 sec.
1 min.
CAM1
CAM2
CAM3
CAM4
OK

From the *Monitor Setting* list...

- *touch **Auto Switch Time***
  - *select a **camera switching** interval (5 sec to 60 sec)*
  - *check the **cameras** to be included in **auto switching** mode*
  - *touch **OK to set***

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

*touch a **Menu Icon** ... to open a **Function Screen** ... to check or change a **Function***

SETTINGS *(cont.)*

Monitor Setting *(cont.)*

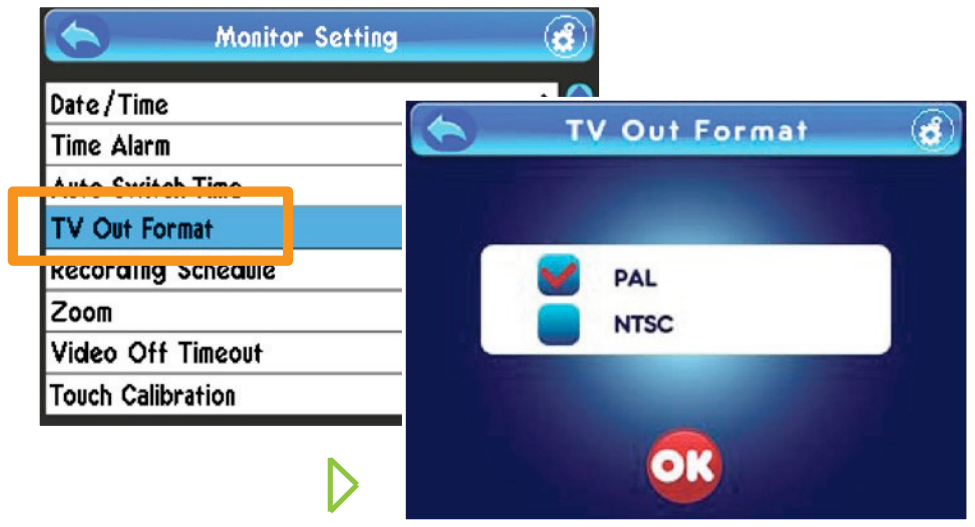
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
TV Out Format
PAL
NTSC
OK

From the *Monitor Setting* list...

- *select **TV Out Format***
  - *choose either **PAL** or **NTSC** video format (US standard is NTSC)*
  - *touch **OK to set***

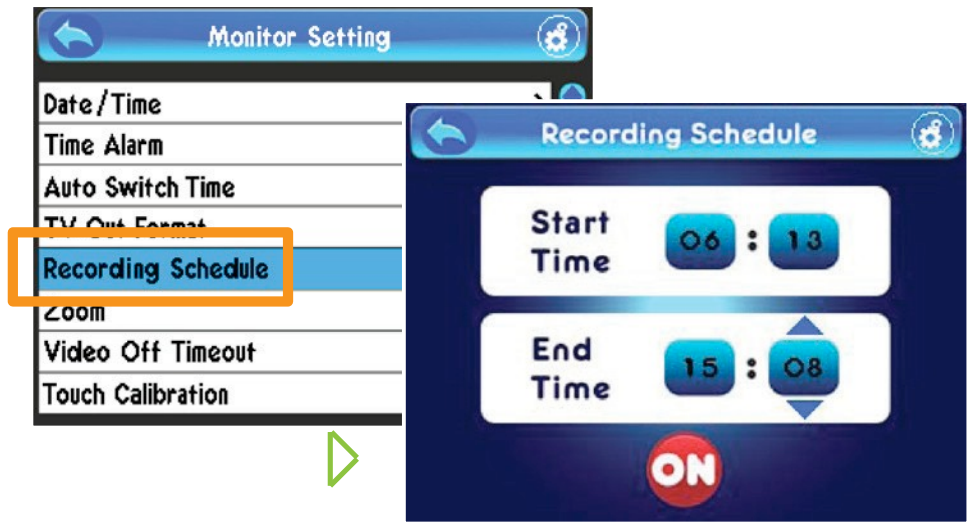
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
Recording Schedule
Start Time 06 : 13
End Time 15 : 08
ON

From the *Monitor Setting* list...

- *select **Recording Schedule***
  - *touch **any value** and then touch the **up** and **down arrows** to **adjust time***
  - *to activate press **On** (or **OFF** to deactivate)*

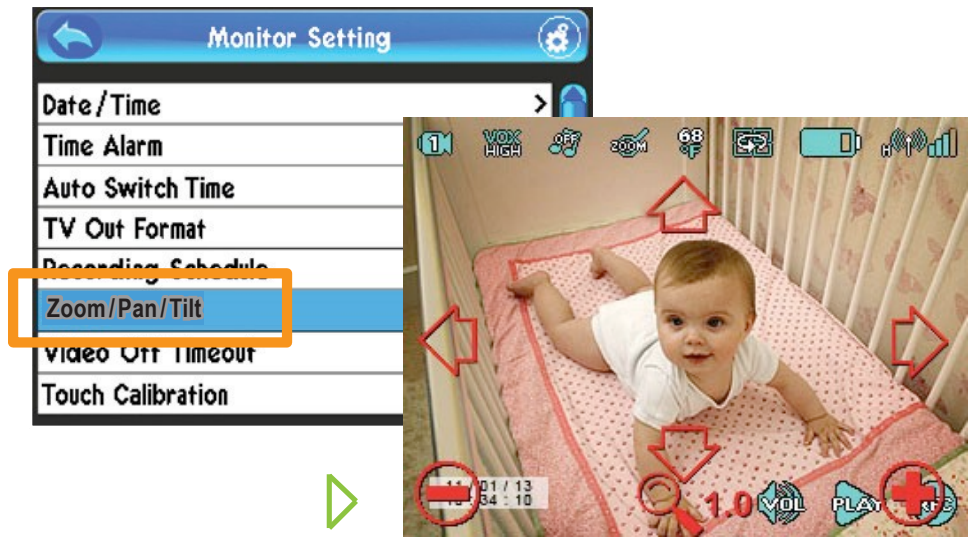
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom/Pan/Tilt
Video Off Timeout
Touch Calibration
1.0
VOL
PLAY

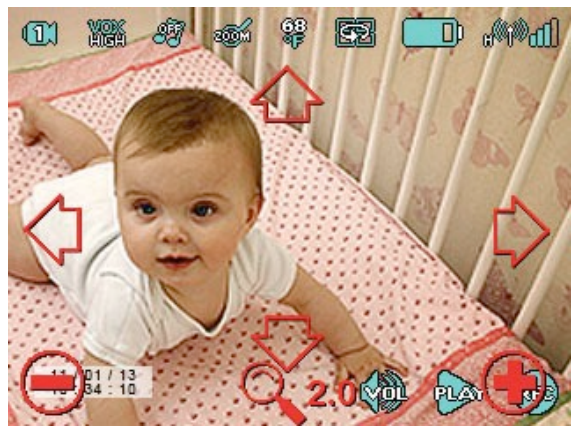

From the *Monitor Setting* list...

- *select **Zoom/Pan/Tilt** and go to the camera scene with Zoom/Pan/Tilt icons overlaying the image...*
  - *to **Zoom-In** touch the **+** icon (maximum of 3.0-to-1 enlargement)*
  - *to **Zoom-Out** touch the **–** icon*
  - *to **Pan or Tilt** touch the **arrow** icons (you can Pan or Tilt only after you have zoomed in)*

*NOTE: Press the **ESC Button** to return to the video image without Zoom/Pan/Tilt icons overlaying it.*

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

*touch a **Menu Icon** ... to open a **Function Screen** ... to check or change a **Function***

SETTINGS *(cont.)*

Monitor Setting *(cont.)*

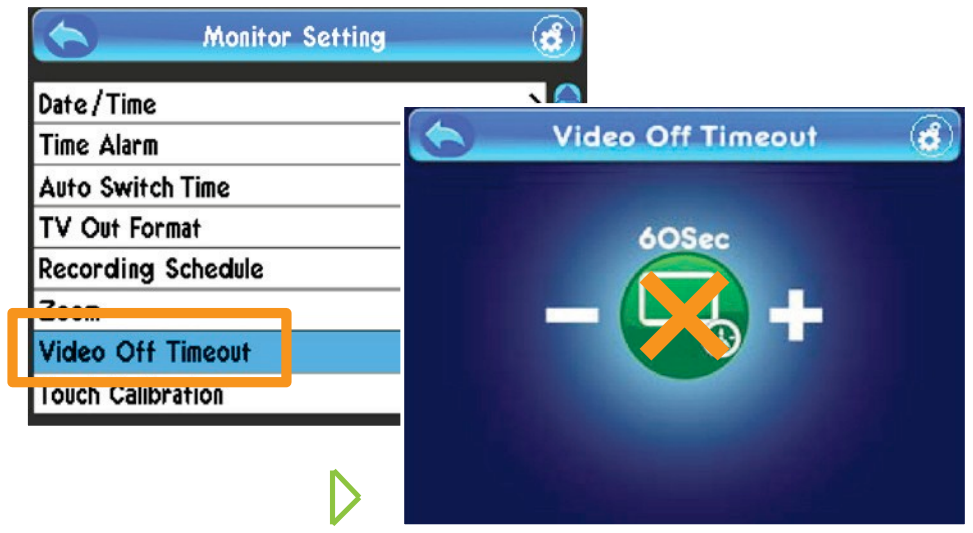
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
Video Off Timeout
60Sec
–
+

From the *Monitor Setting* list...

- *touch **Video Off Timeout***
  - *touch the **timer** icon to choose between **non-active** (X) or **active** (no X) **Timeout Mode***
  - *if active, touch the **–** or **+** icons to set the limit at which time the video will automatically **Timeout** (turn off)*

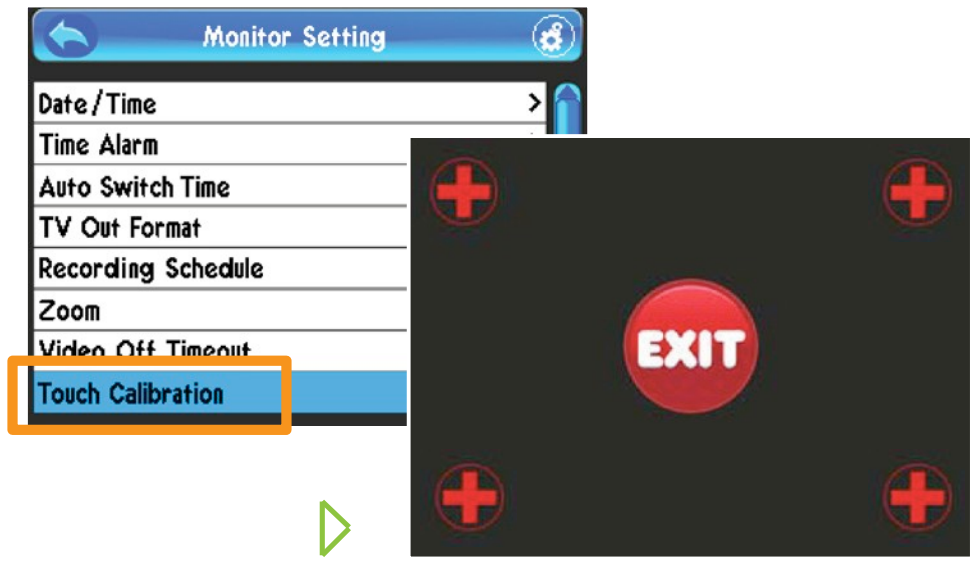
Monitor Setting
Date/Time
Time Alarm
Auto Switch Time
TV Out Format
Recording Schedule
Zoom
Video Off Timeout
Touch Calibration
EXIT

From the *Monitor Setting* list...

- *select **Touch Calibration***
  - *touch the **+** icons as they appear in each corner of the screen (this calibrates the monitor for best touch screen accuracy)*
  - *once all four corners are touched, tap **EXIT** to return to the Monitor Setting list*

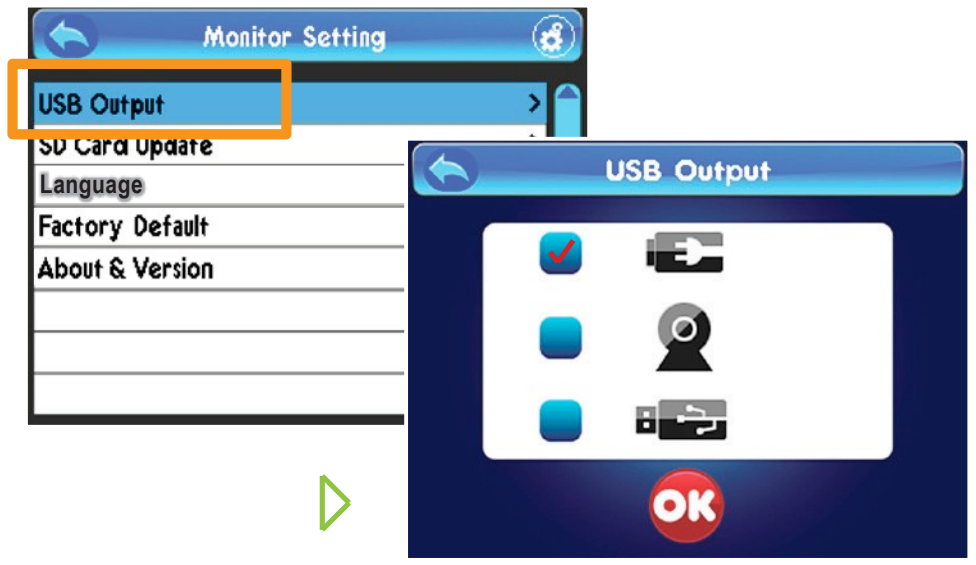
Monitor Setting
USB Output
SD Card Update
Language
Factory Default
About & Version
USB Output
OK

From the *Monitor Setting* list...

- *touch **USB Output***
  - *select the **Top** icon for **Charging** the monitor via the AC Adapter (included)*
  - *select the **Middle** icon to use the system as a **USB Webcam** on a PC* via the USB Data Cable (included) or...*
  - *select the **bottom** icon for PC file transfer mode to or from an SD Card in the monitor via the included USB Data Cable*
  - *touch **OK** to **set***

* *See page 17 for details on using the USB Output for viewing video or transferring video or photo files to a PC.*

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

SETTINGS *(cont.)*

Monitor Setting *(cont.)*

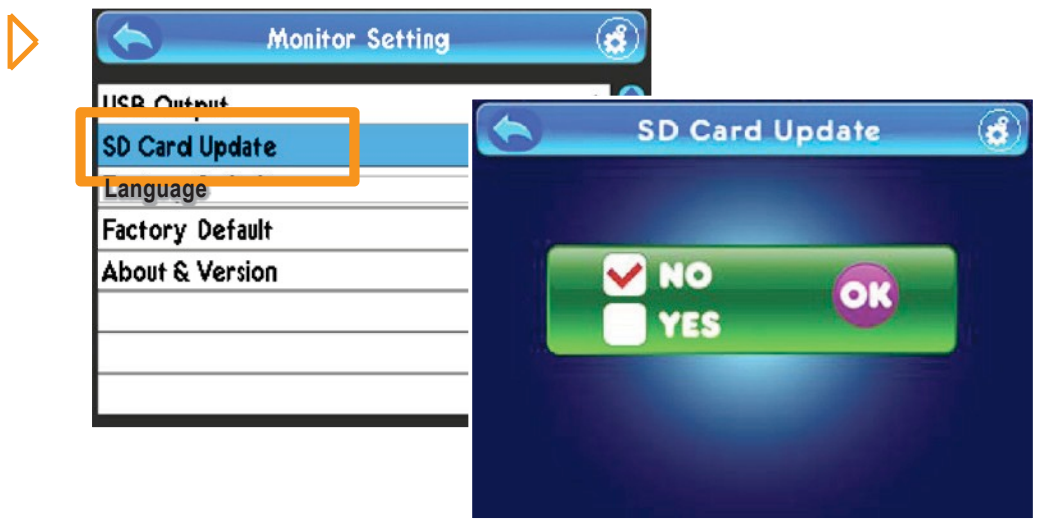
Monitor Setting
USB Output
SD Card Update
Language
Factory Default
About & Version
SD Card Update
NO
YES
OK

From the *Monitor Setting* list...

- NOTE: Though shown here for reference, ***SD Card Update*** is to be used ***ONLY*** for ***Updating System Firmware***, which would be downloaded and put onto an SD card in order to be installed using this option. Specific instructions will be provided to registered users regarding any new firmware.

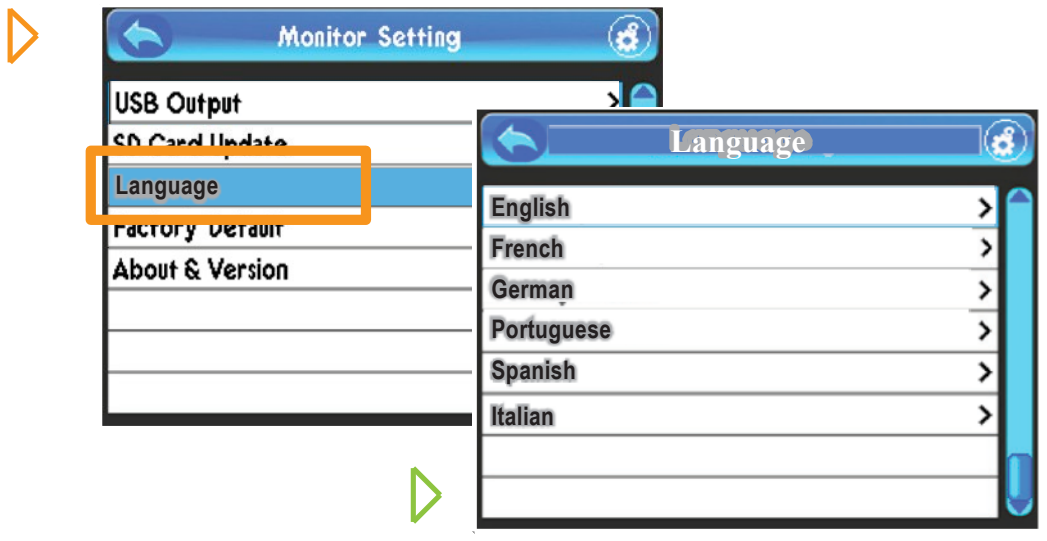
Monitor Setting
USB Output
SD Card Update
Language
Factory Default
About & Version
Language
English
French
German
Portuguese
Spanish
Italian

From the *Monitor Setting* list...

- touch ***Language***
  - touch one of the 6 specific ***Languages*** you want the monitor to show in all text displays

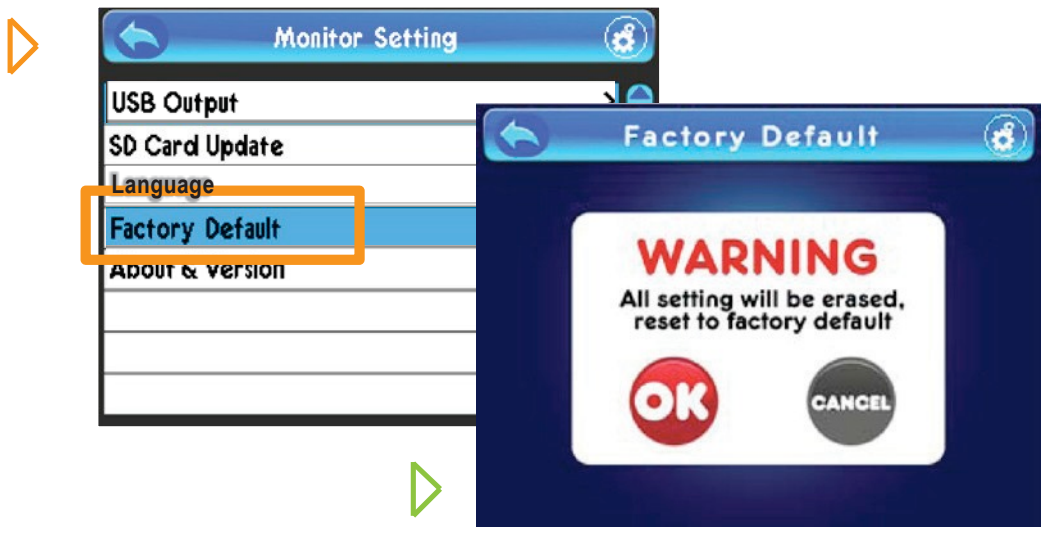
Monitor Setting
USB Output
SD Card Update
Language
Factory Default
About & Version
Factory Default
OK
CANCEL

WARNING

All setting will be erased, reset to factory default

From the *Monitor Setting* list...

- touch ***Factory Default***
  - choose ***OK*** to ***reset all settings***, or ***Cancel*** if you ***change your mind***

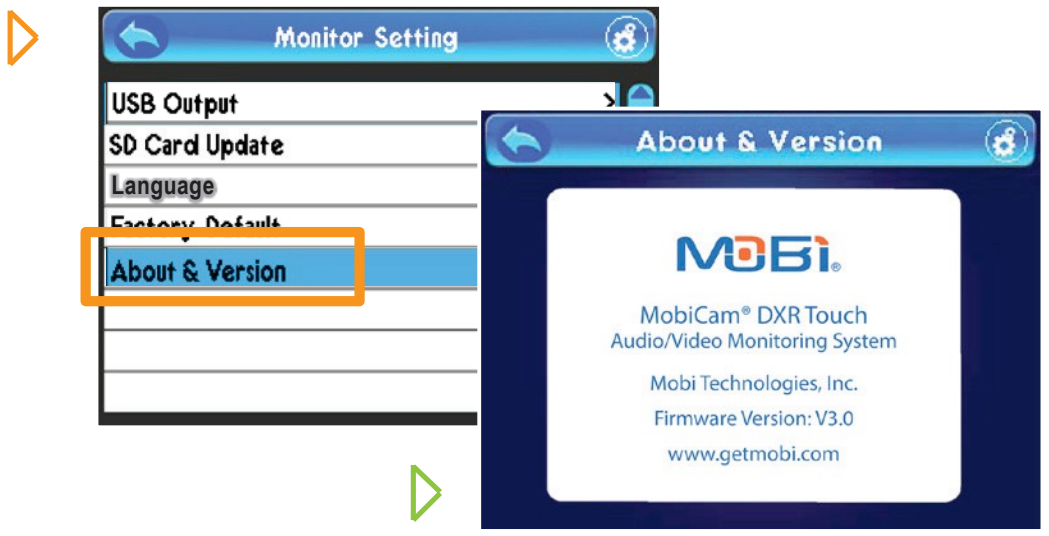
Monitor Setting
USB Output
SD Card Update
Language
Factory Default
About & Version
About & Version

MOBi

MobiCam® DXR Touch
Audio/Video Monitoring System
Mobi Technologies, Inc.
Firmware Version: V3.0
www.getmobi.com

From the *Monitor Setting* list...

- touch ***About & Version***
  - here you will see the product name and manufacturer, and the latest version of the installed firmware

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

SETTINGS *(cont.)*

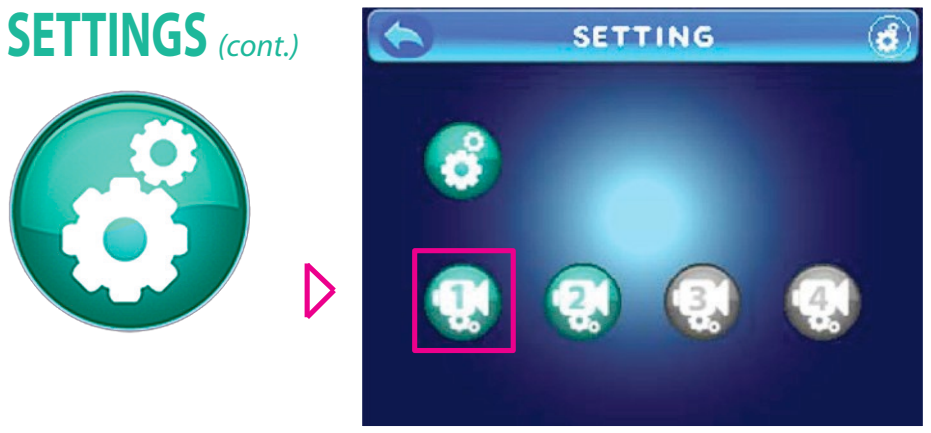
SETTING
1
2
3
4

Camera Settings

- on the Setting Screen, simply touch the ***Camera*** icon (on the bottom line) for the one you wish to control the settings for...

  NOTE: Only ***Paired*** camera icons will show in color and be active for touch control.

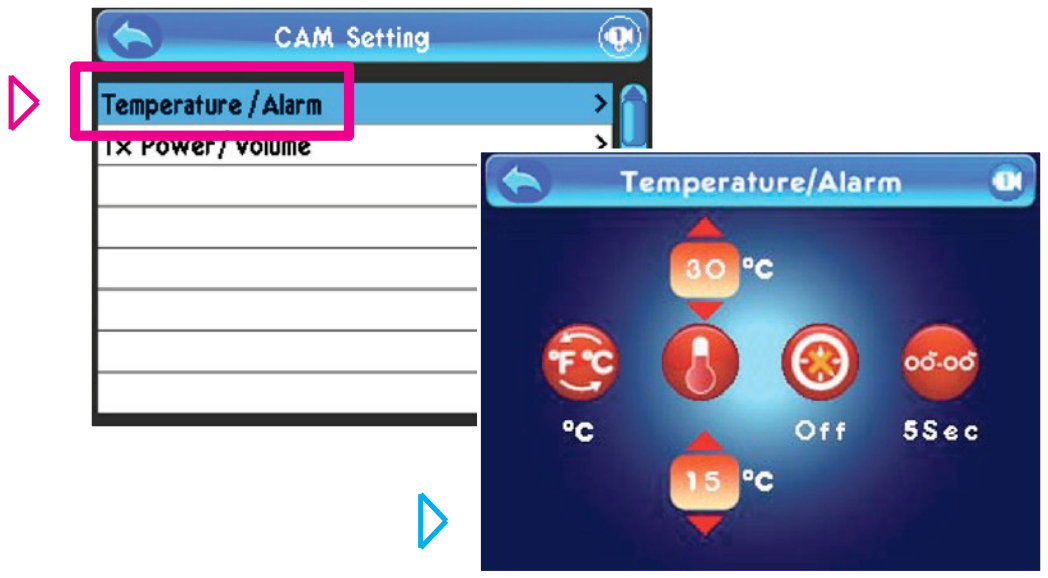
CAM Setting
Temperature / Alarm
Tx Power / Volume
Temperature/Alarm
30 °C
°F °C
°C
Off
5Sec
15 °C

From the *Camera Setting* screen...

- touch ***Temperature/Alarm***
  - set ˚**F** or ˚**C** (default is ºF)
  - touch the ***thermometer*** icon
  - ***set*** the maximum and minimum alarm ***temperature range***
  - set the ***Alarm*** to be ***On*** or ***Off***
  - if ***On***, set the ***Alarm Time*** (from 5 to 60 seconds)

NOTE: When the room temperature (where the camera is) goes above or below the temperature range you set, the monitor will sound an alarm and the small ***Temperature*** icon on the monitor screen will flash showing the out-of-range temperature in that room. The ***ESC Button*** will temporarily silence the repeating alarm until the temperature returns to the set range, or you turn the ***Alarm Off*** from this screen.

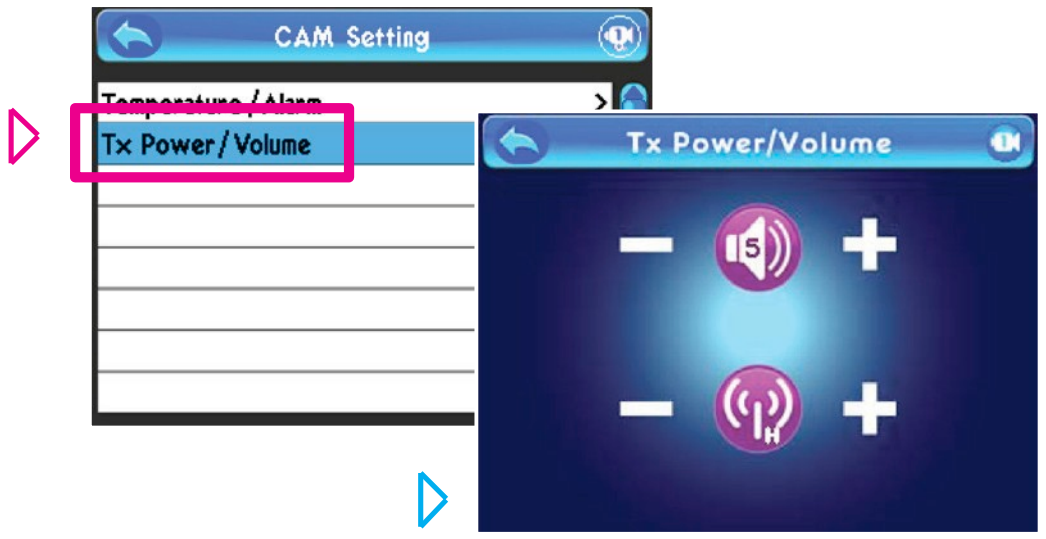
CAM Setting
Temperature / Alarm
Tx Power / Volume
Tx Power/Volume
15
H

From the *Camera Setting* list...

- touch ***Tx Power/Volume***
  - adjust the ***Camera Speaker Volume*** (top icon) up or down for the Two-Way Talk function
  - set the ***Transmit Range Power*** (lower icon) on ***High*** or ***Low***

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

INDIVIDUAL CHANNEL and CONVENIENCE ICONS

IMPORTANT: ***Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.***

Specific small icons are created for each paired camera at the top edge of the screen which relate to that individual camera (except **Battery Level**, which is for the **monitor only**). To use them...

just observe or touch one of the following **Individual Channel** icons to either...

A... view **current Camera Number**, or change to the **next camera** you want to view
B... view **current VOX level**, or change **VOX sound sensitivity level** for that camera
C... view **Lullaby status**, change the **Lullaby selection**, or **turn off Lullabys** from that camera
D... add **Zoom / Pan / Tilt** controls over the scene to manipulate the image from that camera

NOTE: Other individual camera icons appear for informational purposes, such as ***Room Temperature, Switching Mode*** *and* ***Signal Strength****, and when in* ***Quad Mode****, each camera screen shown will also display the Signal Strength of that particular camera.*

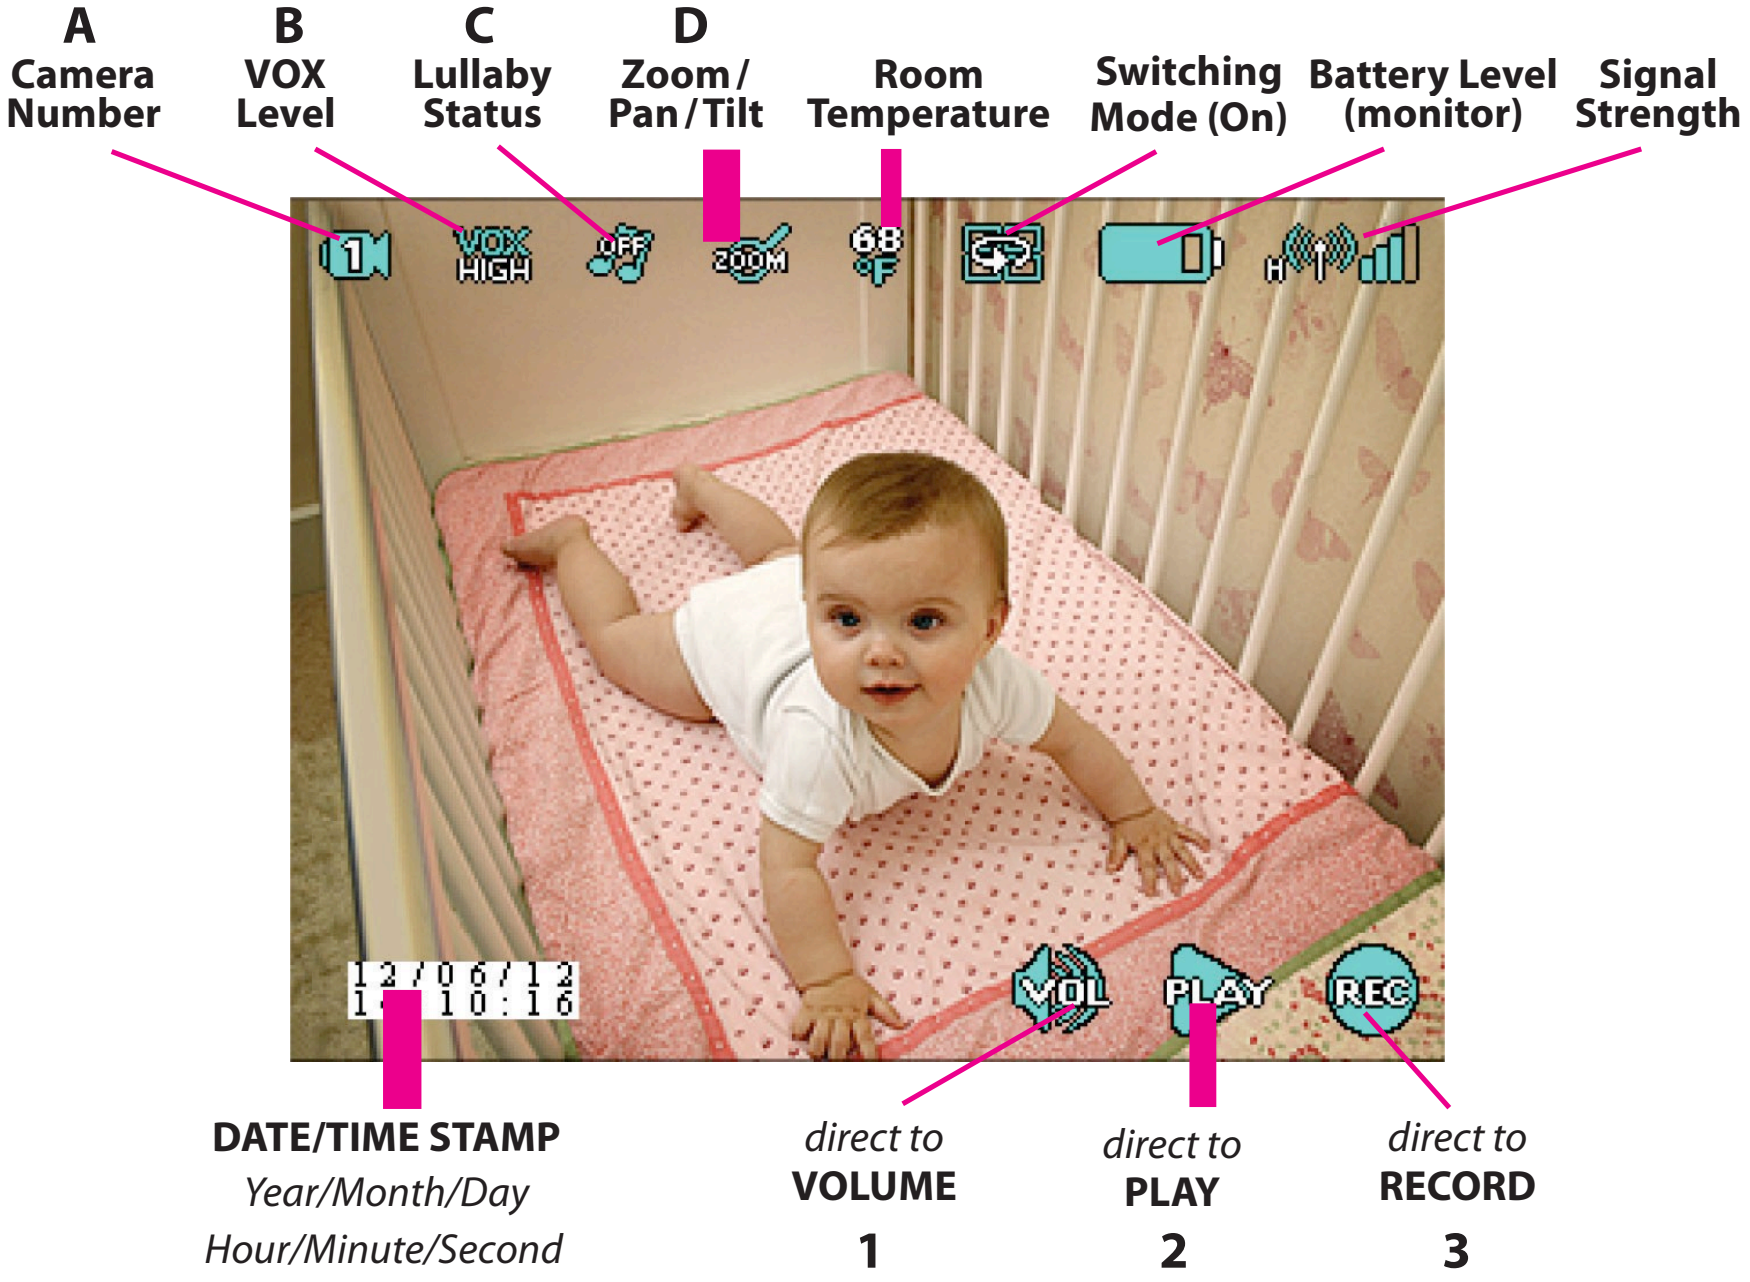

Each paired camera scene also displays **Convenience Icons** (shown along the bottom of the screen) so you can either view the **current Date/Time Stamp** or...

touch and **bypass** the **Main Menu** to...

1... instantly adjust **Volume** controls for that camera
2... instantly access the **Play Video / View Photo** control panel
3... instantly **Record Video** from that camera...***with just one touch!***

WEBCAM USE

To view a larger version of the monitor screen on your PC screen...*

Note: Using this feature allows viewing only on the computer. Once USB Connection is established the monitor screen is turned off and all features and buttons (with the exception of the ESC Button) will not be functional.

1. *Set the* ***USB Output*** *on the monitor to the* ***Webcam*** *icon (refer to page 13)*

2. *Using the* ***USB Cord*** *(included), connect the monitor to an available USB port on your PC**

3. *Wait for your computer to automatically* ***recognize*** *and* ***install*** *the appropriate* ***drivers*** *and you receive a* ***Successful Installation*** *message.*

4. *Once you have installed the device driver, your* ***MobiCam® DXR Touch*** *can be utilized as a* ***wireless webcam****.*

5. *Once the picture from the monitor is displayed on your computer screen, pressing the* ***ESC Button*** *on the monitor toggles between* ***Single*** *and* ***Quad View*** *modes.*

The DXR Touch can be used with Skype®, Windows Messenger®, Google Talk® and Yahoo Messenger®. When utilizing Skype®, Windows Messenger®, Google Talk® or Yahoo Messenger®, please refer to their documentation for techical support.

** The MobiCam® DXR Touch is only compatable with Windows® PCs.*

DATA/FILE TRANSFERS

To transfer photo and video files from the monitor to your PC ...*

Note: Using this feature allows viewing only on the computer. Once USB Connection is established the monitor screen is turned off and all features and buttons (with the exception of the ESC Button) will not be functional.

1. *Set the* ***USB Output*** *on the monitor to the* ***USB Connection*** *icon (refer to page 13)*

2. *Using the* ***USB Cord*** *(included), connect the monitor to an available USB port on your PC**

3. *Wait for your computer to automatically* ***recognize*** *and* ***show*** *the outside* ***Memory Device***

4. *You may then* ***move*** *or* ***copy files*** *from the SD Card (not included) as you normally would with any such storage device (provided an SD Card is in the monitor and has data stored on it)*

** The MobiCam® DXR Touch is only compatable with Windows® PCs.*

AUDIO/VIDEO OUT

You can hear and see audio/video output on a TV or other AV device directly from your DXR Touch monitor.

Simply connect the AV OUT Cord (included) to the AV OUT jack on the right side of the monitor and connect the other ends (three RCA connectors) to the Audio and Video Input jacks on your TV, DVR, or Camcorder, and select the appropriate input setting on that AV device.

When the AV OUT cord is connected to an external device, the DXR Touch monitor screen will automatically turn off. Please refer to the manual for the AV device you are connected to for proper input selection and operation.

TROUBLESHOOTING

Problem	**Solution**
Monitor will not turn on	• Check AC/DC connection • Confirm power outlet is working properly • Charge Battery Pack
Monitor on but no picture	• Confirm "Audio Only" mode is not selected • Confirm "VOX" mode is OFF • Confirm there are no obstructions in front of camera • Confirm camera and monitor are paired properly
Camera will not turn on	• Check AC/DC connection • Confirm power outlet is working properly
Battery does not recharge	• Check AC/DC connection. • Check battery pack connection in the monitor. • Confirm power outlet is working properly • Confirm batteries are placed correctly in monitor
Connection is lost	• Confirm monitor and camera are ON. • Confirm AC/DC adapter is connected properly • Confirm battery has sufficiant power. • Place camera and monitor near each other and press camera **Pair** button to relink camera and monitor. • Reduce distance between camera and monitor. • Remove or avoid other wireless products that may be near camera or monitor.

FACTORY DEFAULT SETTINGS

Item	Default value	Range
Monitor setting value		
Volume	5	0-9
Contrast	5	0-9
Brightness	5	0-9
Date & Time	2011/09/01,08:00	
Alarm Time	Off, 09:00	On , Off
Date Time Stamp	Off	On , Off
Auto Switch time	5s	5s,10s,30s,1min
Recording schedule	Off	On , Off
	Start Time : 12:00:00	
	Final Time: 12:11:00	
Zoom	1.0	1.0 to 3.0
TV out format	PAL	PAL,NTSC
Monitor Video Off Timeout	Off, 60s	From 5s to 180s
Camera setting value		
VOX setting	Off	High, Middle, Low, Off
Lullaby	Off	Off, Lull 1, Lull 2, Lull 3, Lull 4
Temperature setting	°F	°F - °C
	Min 59°F - Max 86°F	50°F - 122°F
	Alarm Off	On/Off, 5s,10s,30s,1m (increments)
Volume	5	0-9
TX Power	High	High, Low
Night Light	Off	Off, On

BATTERY REPLACEMENT

Monitor Battery (included)
Li-Ion 3,7V 1200 mAh

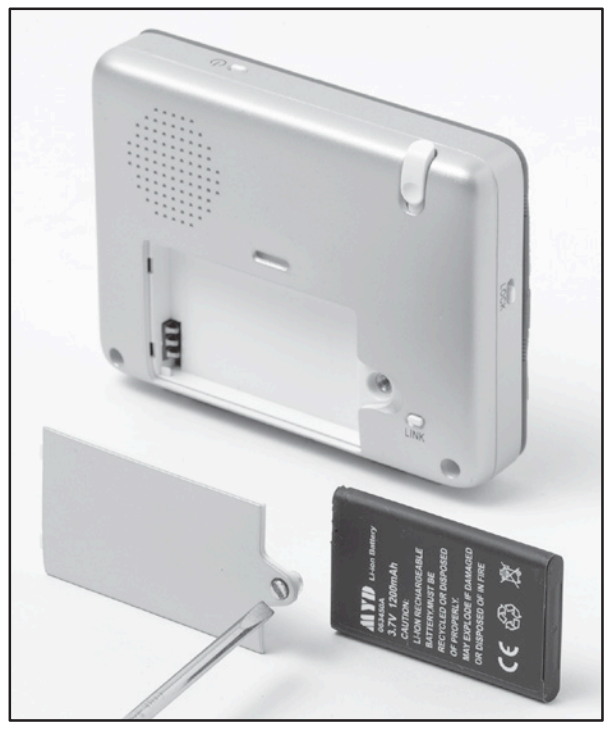

Camera Battery (not included, sold separately, Mobi part # 70216) Li-Ion 3,7V 1500 mAh

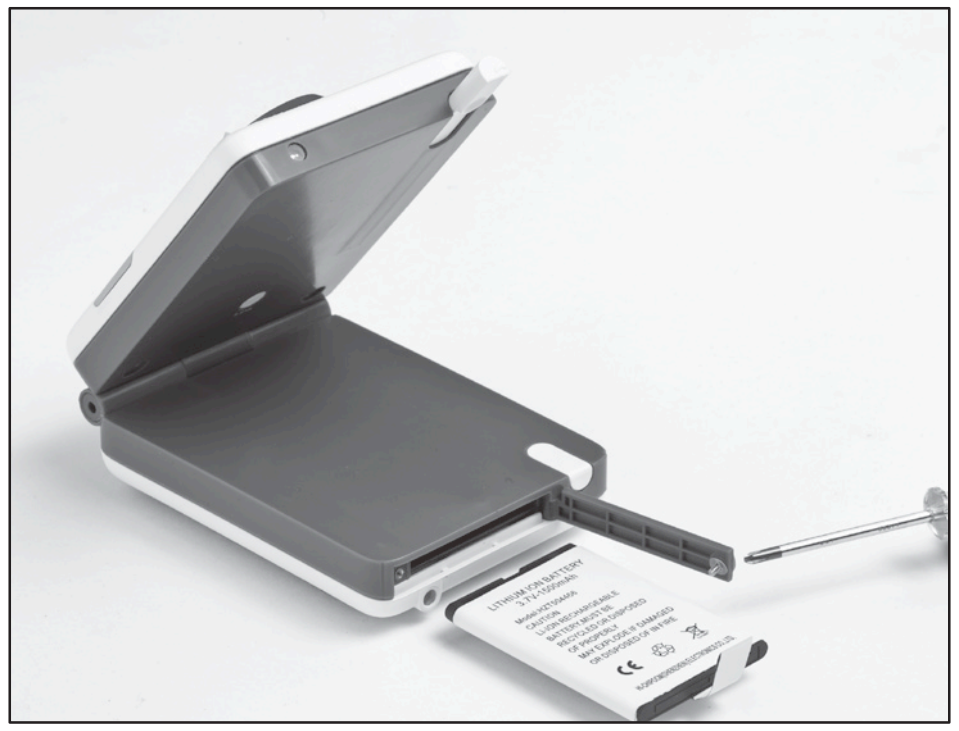

PRODUCT SAFETY

This product is not intended to be used as a medical monitor and its use should not replace adult supervision.

CAUTION

- Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or serious injury. Do not operate any product with a damaged cord or plug. If the product malfunctions, or is damaged in any manner, please contact the manufacturer for examination and repair to avoid a potentially serious hazard.
- Never use the camera, monitor, or AC adapters near water (i.e. bathtub, sink, etc.).
- Always use the camera and the monitor where there is adequate ventilation. To prevent overheating keep the camera and the monitor away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Use only a dry cotton cloth to keep the units free of dust. Do not use a damp cloth, water, or liquid cleaner of any kind.
- Remove the battery from either unit during long periods of non-use, as batteries may leak.
- Unplug the AC adapters from the monitor and the camera during periods of non-use. To disconnect from the electrical outlet, grip the transformer and pull from the power socket. Never remove by pulling the cord.
- Only use the Monitoring System with the supplied power adapters.

WARNING

This product is not a toy. Keep out of reach of children. To prevent strangulation never place a power cord within reach of a child.

PROPER DISPOSAL

If you eventually dispose of the DXR Touch Monitor, Camera, Batteries, or AC Adapters, do so in accordance with current federal, state and local regulations. As a consumer, you may be obligated by law to recycle used batteries.

Do not mix products bearing the WEEE symbol (crossed out trash bin icon) with your general household waste.

For the correct collection and treatment of these products take them to the collection points designated by your local authority. Alternatively, contact the supplier that sold you the product.

LIMITED WARRANTY

Mobi Technologies, Inc. warrants this product to be free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. Should this product prove to be defective at any time during the warranty period, Mobi Technologies, Inc. will, at its option, either replace or repair it without charge. After the warranty period, a service charge will be applied for replacement of parts or labor for repair. If you suspect that the product is malfunctioning or is defective, please call Mobi toll free at 1. 877. 662.4462 and ask for the Service Department. If the problem still persists after consulting with our Service Department, you may return the product to obtain warranty service. Please return it to Mobi along with a dated sales receipt from the place of purchase to verify that it is within the authorized warranty period. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A fee may be charged for repair resulting from such damage. This warranty excludes all incidental or consequential damages and any liability other than what is stated above.

ADDENDUM: Camera Focus Adjustment Instructions

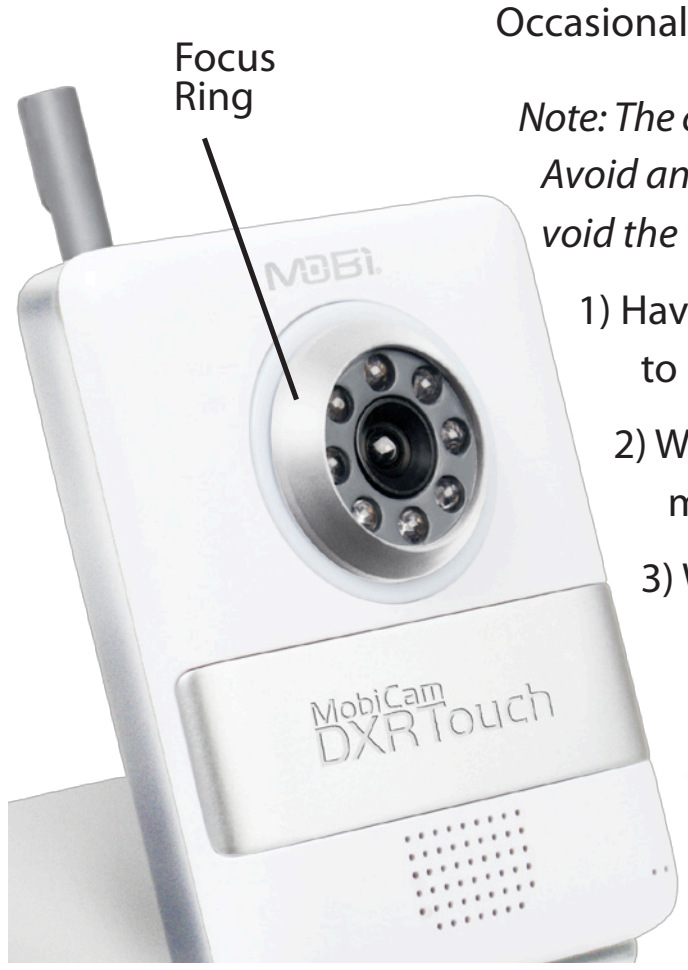

Occasionally you may need to adjust the camera lens for best focus.

Note: The camera lens will only turn less than 45 degrees in either direction. Avoid any forceful turns which could damage the camera and possibly void the warranty.

1) Have the monitor turned on and near the camera you want to adjust.
2) With the camera on, place and point it to the area it will be monitoring.
3) While viewing the camera image on the monitor, grip the silver ring around the camera lens (and the LEDs around it), and then slowly and gently turn the ring.
4) When the video picture on the monitor is at the sharpest release the focus ring and leave it set at that position.